


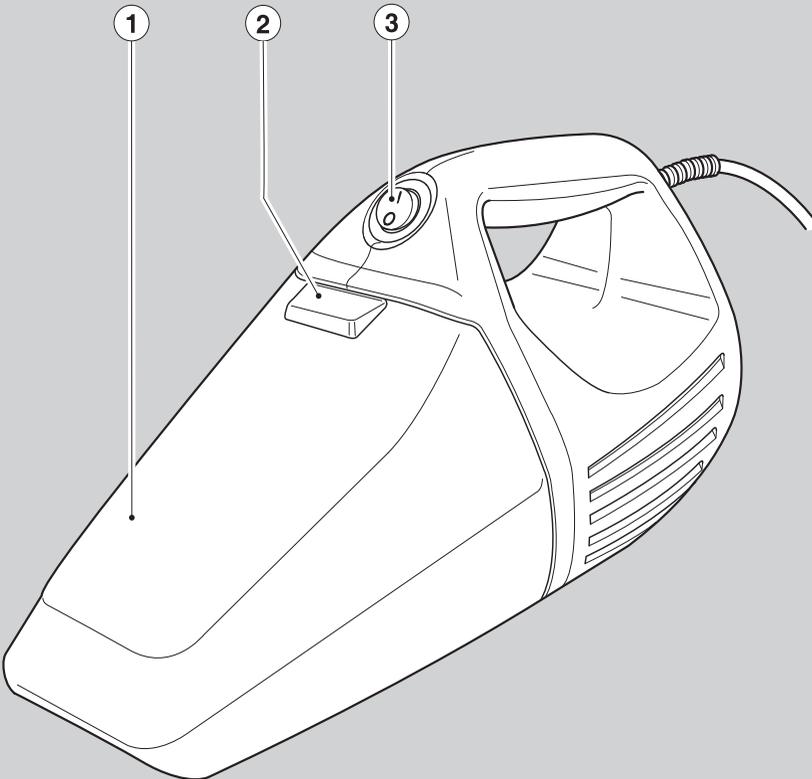

www.blackanddecker.co.uk











UK

Ireland

Australia

New Zealand

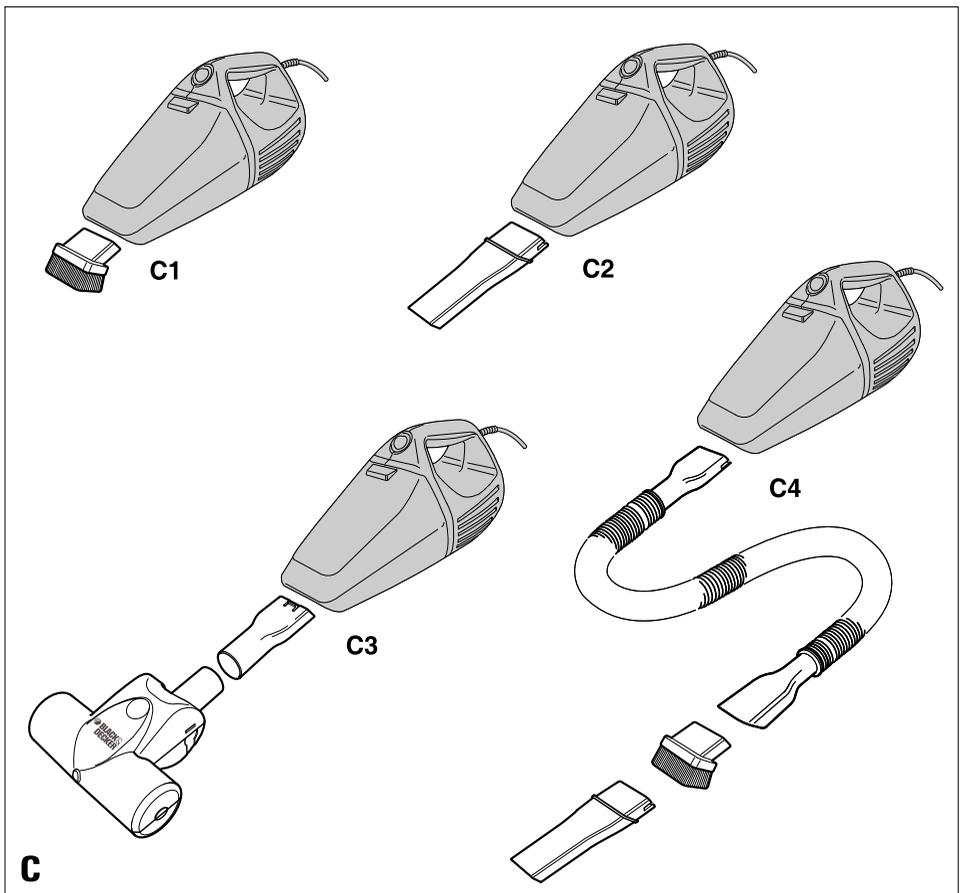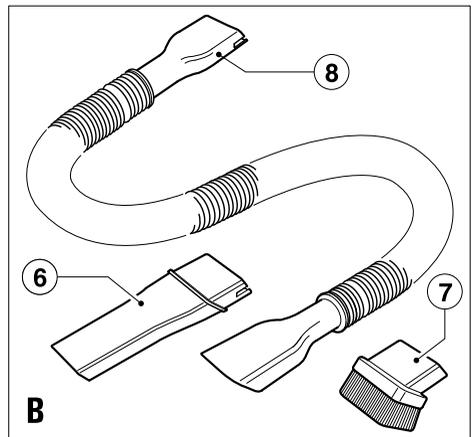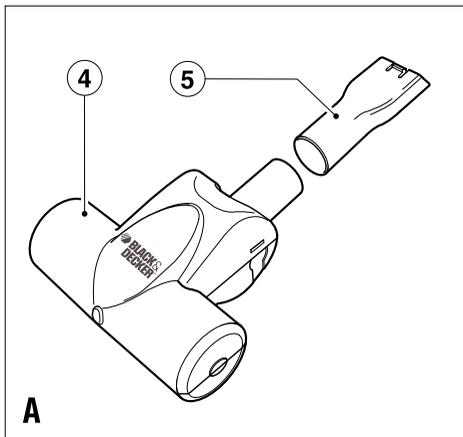

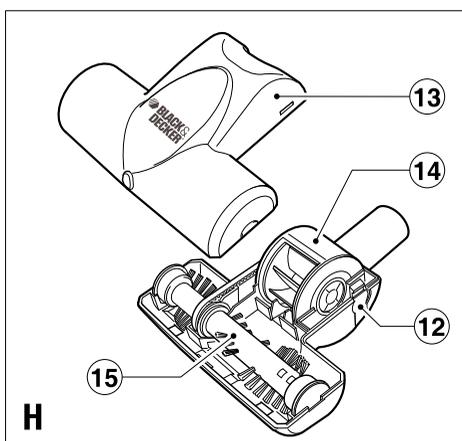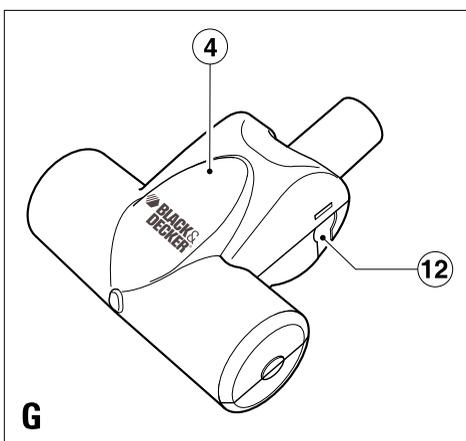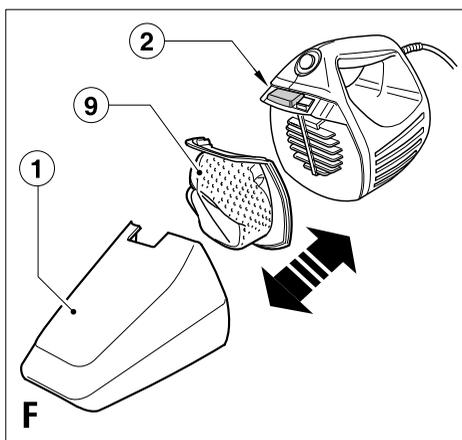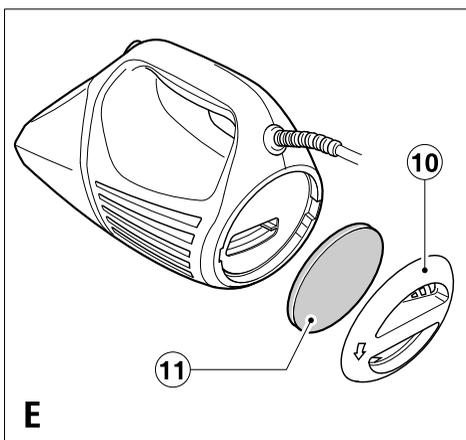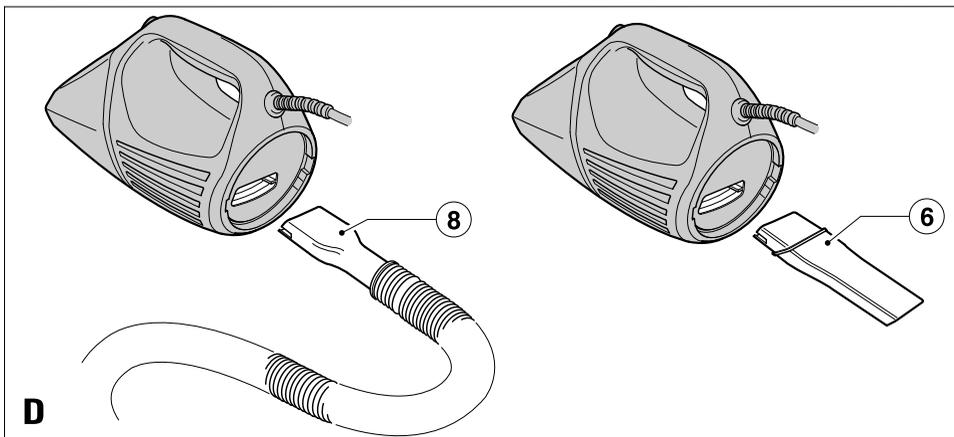

Intended use

Your Black & Decker vacuum cleaner has been designed to vacuum dry substances. This product is intended for household use only.

Safety instructions

Warning! When using mains-powered appliances, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock, personal injury and material damage.

- ◆ Read all of this manual carefully before using the appliance.
- ◆ The intended use is described in this manual. The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.
- ◆ Retain this manual for future reference.

Using your appliance

- ◆ Make sure that the appliance is switched off before connecting to or disconnecting from the power supply.
- ◆ Always take care when using the appliance.
- ◆ Do not use the appliance outdoors.
- ◆ Never pull the power supply cord to disconnect the plug from the socket. Keep the power supply cord away from heat, oil and sharp edges.
- ◆ If the power supply cord is damaged during use, disconnect the appliance from the power supply immediately. Do not touch the power supply cord before disconnecting from the power supply.
- ◆ Disconnect the appliance from the power supply when not in use, before fitting or removing parts and before cleaning.
- ◆ Do not allow children or any person unfamiliar with these instructions to use the appliance.
- ◆ Do not allow children or animals to come near the work area or to touch the appliance or power supply cord. Close supervision is necessary when the appliance is used near children.

Safety of others

- ◆ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ◆ Children should be supervised to ensure that they do not play with the appliance.

After use

- ◆ Switch off and remove the plug from the socket before leaving the appliance unattended and before changing, cleaning or inspecting any parts of the appliance.
- ◆ When not in use, the appliance should be stored in a dry place. Children should not have access to stored appliances.

Inspection and repairs

- ◆ Before use, check the appliance for damaged or defective parts. Check for breakage of parts, damage to switches and any other conditions that may affect its operation.
- ◆ Do not use the appliance if any part is damaged or defective.
- ◆ Have any damaged or defective parts repaired or replaced by an authorised repair agent.
- ◆ Before use, check the power supply cord for signs of damage, ageing and wear.
- ◆ Do not use the appliance if the power supply cord or mains plug is damaged or defective.
- ◆ If the power supply cord or mains plug is damaged or defective it must be repaired by an authorised repair agent in order to avoid a hazard. Do not cut the power supply cord and do not attempt to repair it yourself.
- ◆ Never attempt to remove or replace any parts other than those specified in this manual.

Electrical safety



This appliance is double insulated; therefore no earth wire is required. Always check that the power supply corresponds to the voltage on the rating plate.

Additional safety instructions for vacuum cleaners

- ◆ Before use, always make sure that the filter is correctly seated.
- ◆ Do not use the appliance to pick up liquids.
- ◆ Do not use the appliance to pick up any materials that could catch fire.
- ◆ Do not use the appliance near water. Do not immerse the appliance in water.
- ◆ Keep the motor draught away from your eyes and face.
- ◆ Keep children and animals at a safe distance when using this appliance.
- ◆ Keep your hair, clothing and gloves away from moving parts. Do not reach into the rotating brush. Keep the rotating brush away from the power supply cord.
- ◆ Do not use damaged accessories.
- ◆ Use only Black & Decker accessories.
- ◆ This appliance is not intended for use by young or infirm persons without supervision. Children must be

supervised to ensure they do not play with the appliance.

Features

1. Dust bowl
2. Dust bowl release button
3. On/off switch
4. Turbo brush tool (VH800T only)
5. Turbo brush adaptor (VH800T only)
6. Crevice tool
7. Brush tool
8. Extension hose (VH800T only)

Assembly

Warning! Make sure that the appliance is switched off and unplugged.

Assembly of the turbo brush tool (fig. A) (VH800T only)

- ◆ Insert the round end of the turbo brush adaptor (5) into the turbo brush tool (4)
- ◆ Insert the turbo brush adaptor (5) into the front of the dust bowl (1). Make sure that attachment is secure.

Fitting the accessories for vacuuming (fig. C)

The accessories provided can be used in various combinations, depending on the task:

- C1 General vacuuming/dusting.
- C2 Vacuuming in confined spaces.
- C3 Vacuuming stairs/carpets.
- C4 Vacuuming upholstery or in corners.

Fitting an accessory (fig. B & C)

To fit an accessory, proceed as follows:

- ◆ Insert the appropriate accessory into the front of the dust bowl (1) (fig. C).
- ◆ The accessory can also be fitted to the extension hose (8) (fig. B).

Fitting the accessories for blowing (fig. D & E)

Warning! When using the appliance for blowing purposes, wear eye protection. Keep the air intake free from obstructions to prevent the motor from overheating. Do not point the air outlet at yourself, bystanders or animals. Make sure that the dustbowl and filter are clean before using the blowing function.

To fit an accessory, proceed as follows:

- ◆ Open the exhaust filter cover (10).
- ◆ Insert either the crevice tool (6) or the extension hose (8) into the opening. Make sure that it fits snug against the rear of the appliance (fig. D).
- ◆ Insert the other accessories into the extension hose (8) as required.

Use

Warning! Before connecting to the power supply, make sure that the appliance is switched off.

Switching on and off (overview)

Warning! Make sure that the accessories are securely attached before switching on. Keep a firm grip on the appliance, and especially the extension hose (8), when switching on and during use.

- ◆ To switch the tool on, set the on/off switch (3) to the on position (I).
- ◆ To switch the tool off, set the on/off switch (3) to the off position (O).

Motor thermal safeguard

The motor of the appliance is fitted with a thermal safeguard. This device automatically switches the appliance off in case of overheating. If this occurs, proceed as follows:

- ◆ Switch the appliance off and remove the plug from the wall socket.
- ◆ Allow the unit to cool. When the unit has cooled down, check and clean the filters.
- ◆ Re-insert the plug in the wall socket and switch the appliance on.

Maintenance

Your Black & Decker appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

Cleaning the dust bowl and filter (fig. F)

When the dust bowl (1) is full or the filter is clogged, empty the dust bowl (1) and clean the filter. The filter is re-usable and should be cleaned regularly.

- ◆ Press the dust bowl release button (2) and remove the dust bowl (1) (fig. F).
- ◆ Remove the filter (9) from the dust bowl (1)
- ◆ Brush any loose dust off the filter (9).
- ◆ Remove any dust from the dust bowl (1).
- ◆ Wash the filter (9) in warm, soapy water. The dust bowl (1) can also be washed if necessary. Do not immerse the appliance in water.
- ◆ Make sure that the dust bowl (1) and the filter (9) are completely dry.
- ◆ Refit the filter (9).
- ◆ Refit the dust bowl (1) onto the appliance.

Make sure that the dust bowl (1) clicks into place.

Cleaning the exhaust filter (fig. E)

To clean the exhaust filter (11), proceed as follows:

- ◆ Turn the exhaust filter cover (10) anti-clockwise to remove it from the appliance.
- ◆ Remove the exhaust filter (11) from the appliance.
- ◆ Wash and dry the exhaust filter (11) as described above.
- ◆ Refit the exhaust filter (11) and replace the exhaust filter cover (10). Turn the exhaust filter cover clockwise to lock it in position.

Warning! Never use the appliance without the filters.

Optimum dust collection will only be achieved with clean filters and an empty dust bowl. If dust begins to fall back out of the appliance after switching it off, this indicates that the dust bowl is full and must be emptied.

Replacing the filters

The filters should be replaced every 6 to 9 months and whenever worn or damaged. Replacement filters are available from your Black & Decker dealer (cat. no. VHF80).

- ◆ Remove the old filters as described above.
- ◆ Fit the new filters as described above.

Storage

- ◆ Wrap the power supply cord around the appliance.
- ◆ Store the appliance and the attachments in a dry location out of the reach of children.

Cleaning

Warning! Before cleaning and maintenance, switch the appliance off and unplug it.

- ◆ From time to time wipe the appliance with a damp cloth.
- ◆ Do not use any abrasive or solvent-based cleaner.
- ◆ Do not immerse the appliance in water.

Clearing the turbo brush (fig. G & H)

- ◆ Remove any hair or threads collected onto the brush (15). Use a pair of scissors if necessary.

To clean the air turbine:

- ◆ Remove the turbo brush cover (13) by pressing the locking tabs (12) and rotating up.
- ◆ Remove any foreign objects which may be blocking the air turbine (14).
- ◆ Install the turbo brush cover (13). Make sure that the locking tabs (12) click into place.

Mains plug replacement (U.K. & Ireland only)

If a new mains plug needs to be fitted:

- ◆ Safely dispose of the old plug.
- ◆ Connect the brown lead to the live terminal in the new plug.
- ◆ Connect the blue lead to the neutral terminal.

Warning! No connection is to be made to the earth terminal. Follow the fitting instructions supplied with good quality plugs. Recommended fuse: 5 A.

Protecting the environment



Separate collection. This product must not be disposed of with normal household waste.

Should you find one day that your Black & Decker product needs replacement, or if it is of no further use to you, do not dispose of it with household waste. Make this product available for separate collection.



Separate collection of used products and packaging allows materials to be recycled and used again. Re-use of recycled materials helps prevent environmental pollution and reduces the demand for raw materials.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.

Black & Decker provides a facility for the collection and recycling of Black & Decker products once they have reached the end of their working life. To take advantage of this service please return your product to any authorised repair agent who will collect them on our behalf.

You can check the location of your nearest authorised repair agent by contacting your local Black & Decker office at the address indicated in this manual. Alternatively, a list of authorised Black & Decker repair agents and full details of our after-sales service and contacts are available on the Internet at: www.2helpU.com.

Technical data

		VH800	VH800T
Voltage	Vac	230	230
Power input	W	800	800
Cable length	m	6	6
Container size	l	0.6	0.6
Weight	kg	2.0	2.0

EC declaration of conformity

VH800 TYPE 1, VH800T TYPE 1

Black & Decker declares that these products conform to: 2006/95/EEC, EN 55014, EN 61000, EN 60335, EN50366

Level of sound pressure, measured according to EN 60704-1: = 72.2 dB(A)

The undersigned is responsible for compilation of the technical file and makes this declaration on behalf of
Black & Decker



Kevin Hewitt
Director of Consumer Engineering
Spennymoor, County Durham, DL16 6JG
United Kingdom
29-05-2009

To claim on the guarantee, you will need to submit proof of purchase to the seller or an authorised repair agent. You can check the location of your nearest authorised repair agent by contacting your local Black & Decker office at the address indicated in this manual. Alternatively, a list of authorised Black & Decker repair agents and full details of our after-sales service and contacts are available on the Internet at: www.2helpU.com

Please visit our website www.blackanddecker.co.uk to register your new Black & Decker product and to be kept up to date on new products and special offers. Further information on the Black & Decker brand and our range of products is available at www.blackanddecker.co.uk.

Guarantee




Black & Decker is confident of the quality of its products and offers an outstanding guarantee. This guarantee statement is in addition to and in no way prejudices your statutory rights. The guarantee is valid within the territories of the Member States of the European Union and the European Free Trade Area.

If a Black & Decker product becomes defective due to faulty materials, workmanship or lack of conformity, within 24 months from the date of purchase, Black & Decker guarantees to replace defective parts, repair products subjected to fair wear and tear or replace such products to make sure of the minimum inconvenience to the customer unless:

- ◆ The product has been used for trade, professional or hire purposes.
- ◆ The product has been subjected to misuse or neglect.
- ◆ The product has sustained damage through foreign objects, substances or accidents.
- ◆ Repairs have been attempted by persons other than authorised repair agents or Black & Decker service staff.

VH800 - VH800T

TYP. 1

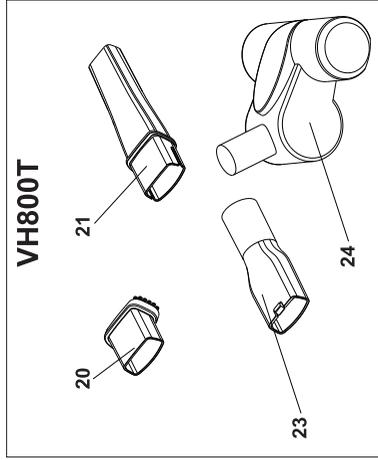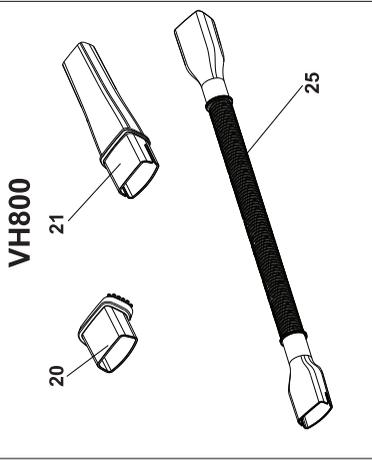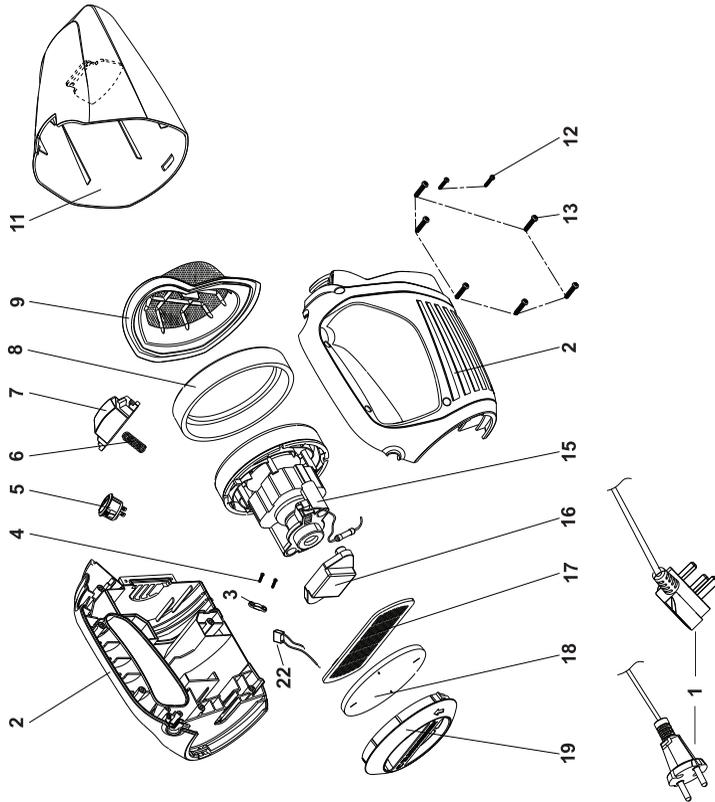

Australia

Black & Decker (Australia) Pty. Ltd.
20 Fletcher Road, Mooroolbark,
Victoria, 3138

Tel. 03-8720 5100
Fax 03-9727 5940

New Zealand

Black & Decker
5 Te Apunga Place
Mt Wellington
Auckland 1060

Tel. +64 9 259 1133
Fax +64 9 259 1122

United Kingdom

Black & Decker
210 Bath Road
Slough, Berkshire SL1 3YD

Tel. 01753 511234
Fax 01753 551155
Helpline 01753 574277