



NS.1010

1/2"=12,7mm

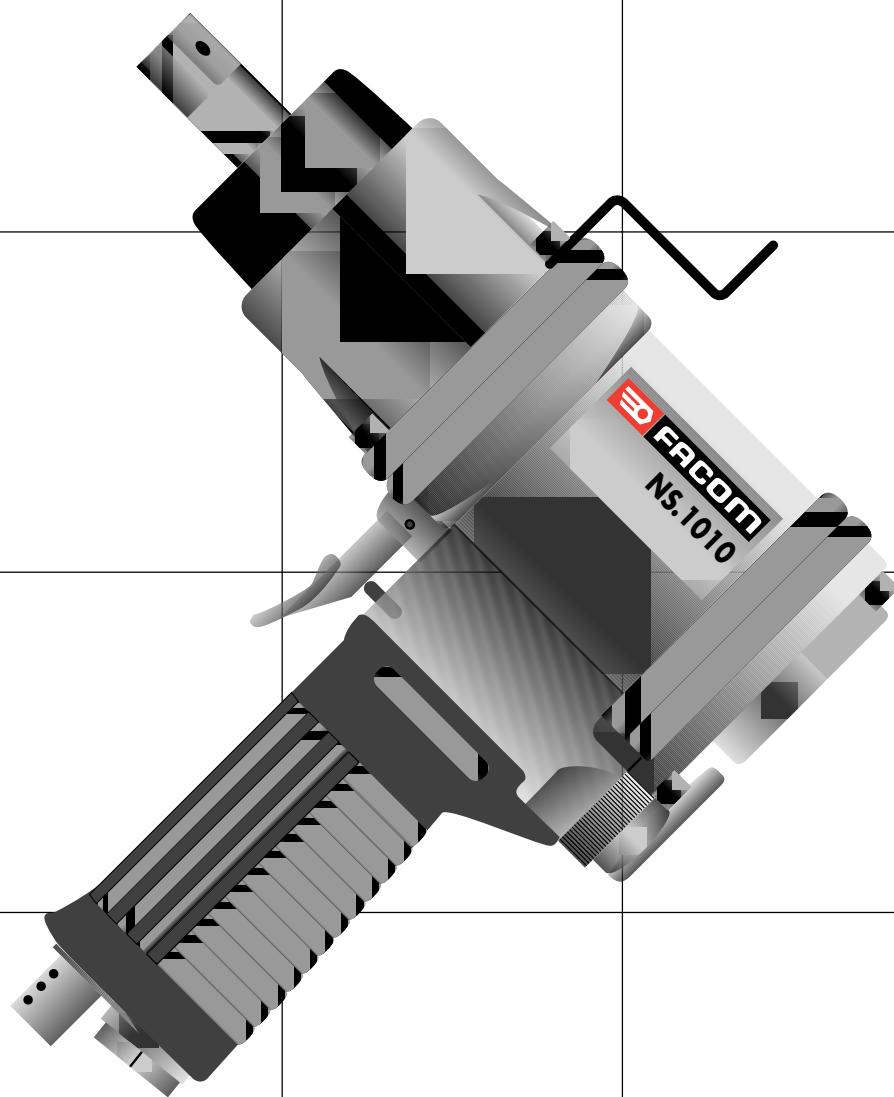

- Clé à chocs
- Impact wrench
- Schlagschrauber
- Slagmoersleutel
- Llave de impacto
- Chiave a percussione

Notice d'instructions
Instruction manual
Bedienungsanleitung
Gebruiksaanwijzing
Manual de instrucciones
Istruzioni d'uso
NU-NS.1010/00

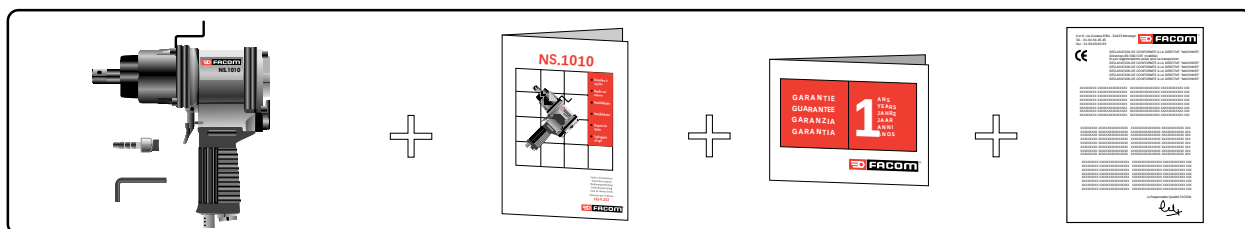

12,7 mm - 1/2"

29 mm

5500 t/mn 350 Nm

NS.3/8 - 1"1/4

NS.6 - 32

NSL8 - 32

NS.210 - 219

NSH.3 - 19

NS.230

NS.232A

NS.240

NS.236

NS.237

5,5 - 14

1 - 4

1 - 4

20 - 55

12 - 16

25 - 70

1/2"

5/16"

3/8"

3/4"

1/2"

Ø 8 mm mini



1/4" NPT

Ø int. 10 mm

7 bar → 590 l/mn

2,7 kg 90 dbA

4,47 m/s²

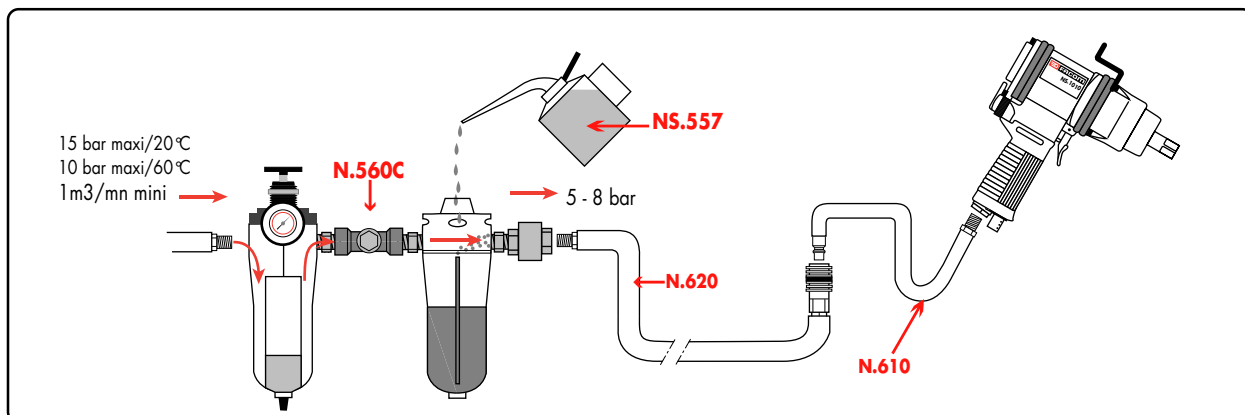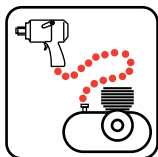

BA.22

BA.24

BA.26

GA.22

GA.23

GA.24

GA.26

GA.28

MINI 350 Nm

350 Nm

Porter des lunettes de sécurité

Wear eye protectors

Schutzbrille tragen

Een veiligheidsbril dragen

Utilizar gafas de seguridad

Portare gli occhiali di sicurezza



Pour garder la machine en bon état, remplacer les pièces d'usure toutes 200 heures d'utilisation.

To keep the machine in proper working order, change wear parts after 200 hours to use.


Um die Maschine in gutem Zustand zu erhalten, Gebrauchsteile alle 200 Betriebsstunden austauschen.

Om deze machine in goede staat te houden, dienen de aan slijtage onderhevige onderdelen na 200 uren gebruik te worden verwisseld.




Para mantener la maquina en buen estado, cambiar las piezas de desgaste despues de 200 horas de utilizacion.

Per mantenere la macchina in buono stato, cambiare le parti d'usura dopo 200 ore di funzionamento.

NS.1010RN2

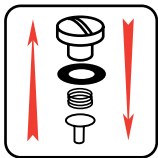

← NS.1010RN2

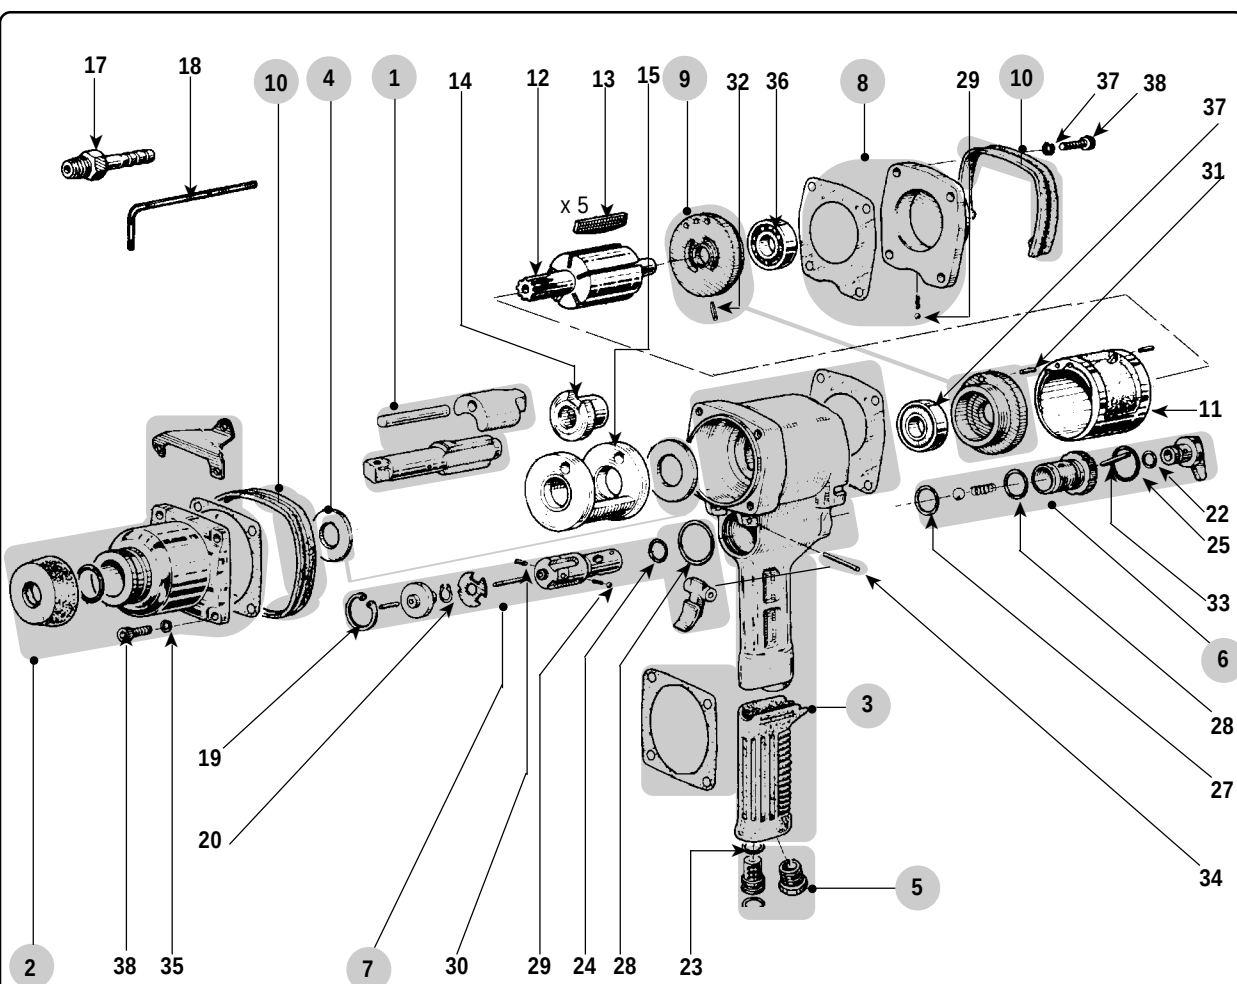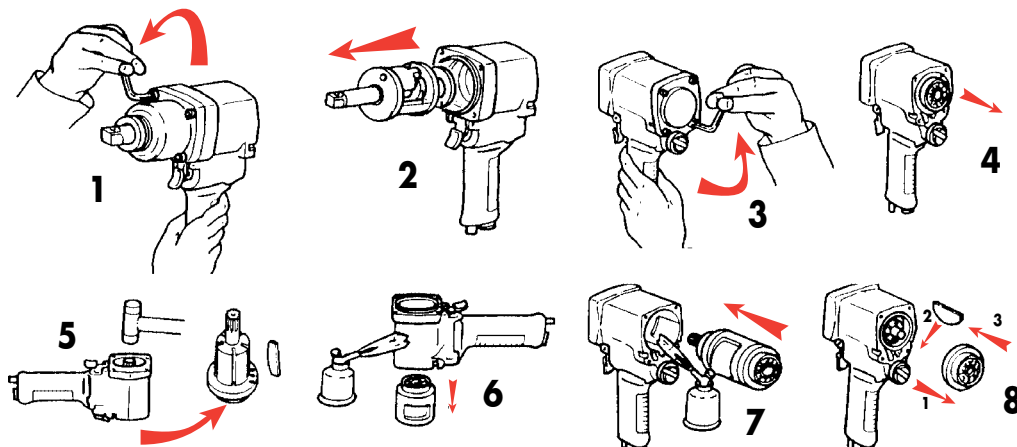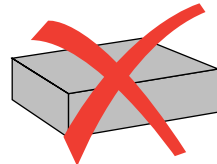

	NS.1010		NS.1010		NS.1010		NS.1010
1	NS.1010RN1	11	NS.1010-041	23	BAGUE.R01150-150	33	GOUP.E,3-14
2	NS.1010SE1	12	NS.1010-044	24	BAGUE.R01200-150	34	GOUP.E,3-28
3	NS.1010SE2	13	NS.1010-046J5	25	BAGUE.R01500-150	35	ROND.W5 (8)
4	NS.1010SE3	14	NS.1010-054	26	BAGUE.R01800-150	36	ROULEMENT.6201
5	NS.1010SE4	15	NS.1010-055	27	BAGUE.R02000-200	37	ROULEMENT.6202Z
6	NS.1010SE5	17	NDB-103	28	BAGUE.R02400-200	38	VISCHC,M5-15 (8)
7	NS.1010SE6	18	82-4	29	BILLE.RB4 (2)		
8	NS.1010SE7	19	ANNEAU.80-0240	30	GOUP.E,3-6		
9	NS.1010SE8	20	ANNEAU.818-080	31	GOUP.E,3-10 (2)		
10	NS.1010SE9	22	BAGUE.R01000-160	32	GOUP.E,3-12		

BELGIQUE FACOM Belgique S.A/NV
LUXEMBOURG Weihoek 4
1930 Zaventem
BELGIQUE
☎ : (02) 714 09 00
Fax : (02) 721 24 11

DANMARK FACOM NORDEN A/S
FINLAND Navervej 16B
ISLAND 7451 SUNDS
NORGE DANMARK
SVERIGE ☎ : (45) 971 444 55
Fax : (45) 971 444 66

DEUTSCHLAND FACOM GmbH
Postfach 13 22 06 
42049 Wuppertal
Otto-Wells-Straße 9 
42111 Wuppertal
DEUTSCHLAND
☎ : (0202) 270 63 0
Fax : (0202) 270 63 50

ESPAÑA FACOM Herramientas SRL
PORTUGAL Poligono industrial de Vallecas
C/.Luis 1º, s/n-Nave 95 - 2º Pl.
28031 Madrid
ESPAÑA
☎ : (0034) 91 778 21 13
Fax : (0034) 91 778 27 53

ITALIA USAG Gruppo FACOM
Via Volta 3
21020 Monvalle (VA)
ITALIA
☎ : (0332) 790 111
Fax : (0332) 790 602

NEDERLAND FACOM Gereedschappen BV
Kamerlingh Onnesweg 2
Postbus 134
4130 EC Vianen
NEDERLAND
☎ : (0347) 362 362
Fax : (0347) 376 020

SINGAPORE FACOM Tools FAR EAST Pte Ltd
FAR EAST 15 Scotts Road
Thong Teck Building #08.01.02
Singapore 228218
SINGAPORE
☎ : (65) 732 0552
Fax : (65) 732 5609

SUISSE FACOM S.A./AG
ÖSTERREICH 12 route Henri-Stéphan
MAGYARORSZAG 1762 Givisiez/Fribourg
CESKA REP. SUISSE
☎ : (4126) 466 42 42
Fax : (4126) 466 38 54

UNITED FACOM Tools LTD
KINGDOM Bridge Wharf - Bridge Road
EIRE CHERTSEY - SURREY KT16-8LJ
UNITED KINGDOM
☎ : (01932) 566 099
Fax : (01932) 562 653

UNITED FACOM TOOLS Inc.
STATES 3535 West 47th Street
Chicago Illinois 60632
U.S.A.
☎ : (773) 523 1307
Fax : (773) 523 2103

FRANCE Société FACOM
& 6-8, rue Gustave Eiffel B.P.99
INTERNATIONAL 91423 Morangis cedex
FRANCE
☎ : 01 64 54 45 45
Fax : 01 69 09 60 93
<http://www.facom.fr>

