


PARTS BREAKDOWN FOR MB6901

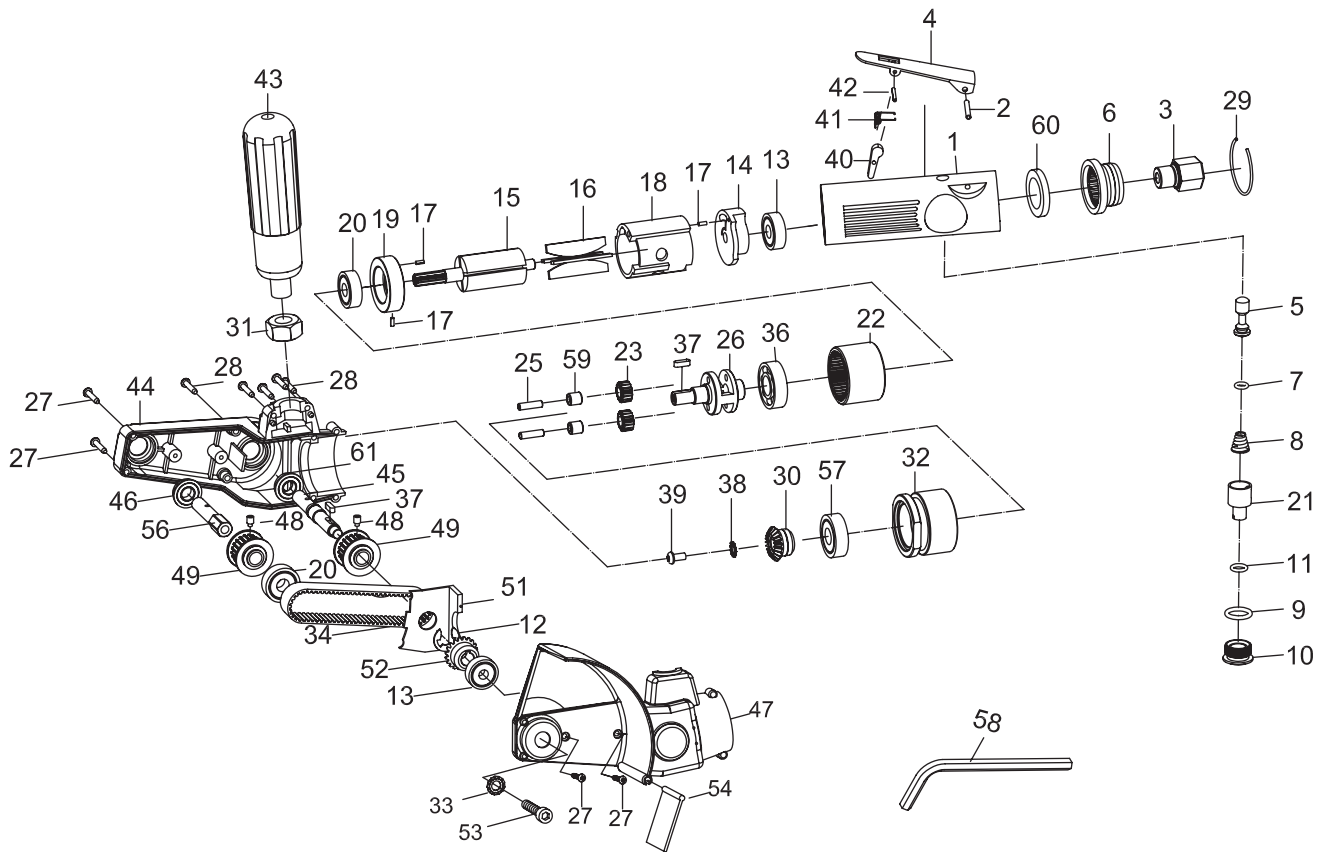

Index No.	Parts No.	Description	Index No.	Parts No.	Description
1	MB6901-01	MOTOR HOUSING	31	MB6901-31	NUT
2	AD3800AH-02	SPRING PIN (3*24)	32	MB6901-32	HOUSING CAP
3	AD3800AH-03	AIR INLET	33	MB6901-33	TOOTHED WASHER
4	MB6901-04	THROTTLE LEVER	34	MB6901-34	TOOTHED BELT
5	MB6901-05	VALVE STEM	36	MB6901-36	BALL BEARING (6001Z)
6	AD3800AH-48	EXHAUST DEFLECTOR	37	MB6901-37	KEY (2) (3*10)
7	AD54013	O-RING (4.8*1.9)	38	MB6901-38	TOOTHED WASHER (BW-4.5)
8	MB6901-08	SPRING	39	MB6901-39	SCREW
9	AD3800K-34	O-RING (11.8*2.4)	40	MB6901-40	SAFETY BAR
10	MB6901-10	THROTTLE VALVE PLUG	41	AG200-36	SPRING
11	MB6901-11	O-RING (4.8*1.9)	42	AG200-38	SPRING PIN (2*18L)
12	MB6901-12	E-RING (ETW-8)	43	MB6901-43	HANDLE
13	AD54006	BALL BEARING (2) (626ZZ)	44	MB6901-44	PLASTIC HOUSING(R)
14	MB6901-14	END PLATE	45	MB6901-45	BELT DRIVE SHAFT
15	MB6901-15	ROTOR	46	MB6901-46	BALL BEARING (LF-688ZZ)
16	MB6901-16	ROTOR BLADES (4)	47	MB6901-47	PLASTIC HOUSING(L)
17	AG200-17	SPRING PIN (3) (2*5L)	48	MB6901-48	SET SCREW (2) (M4)
18	MB6901-18	CYLINDER	49	MB6901-49	TOOTHED PULLEY (2)
19	MB6901-19	FRONT END PLATE	51	MB6901-51	INNER BULKHEAD
20	AD3800AH-20	BALL BEARING (2) (608ZZ)	52	MB6901-52	BEVEL GEAR
21	MB6901-21	AIR REGULATOR	53	MB6901-53	HEXAGONAL HOLE SCREW (M6*20L)
22	MB6901-22	INTERNAL GEAR	54	MB6901-54	DUST COVER
23	MB6901-23	PLANET GEAR (2)	56	MB6901-56	SPINDLE
25	MB6901-25	PIN (2) (4*14.8L)	57	MB6901-57	BALL BEARING (6000Z)
26	MB6901-26	PLANET CAGE	58	MB6901-58	HEX. KEY WRENCH (5MM)
27	MB6901-27	TAPPING SCREW (4)	59	MB6901-59	BUSHING
28	MB6901-28	TAPPING SCREW (8)	60	MB6901-60	MUFFLER
29	AD3800AH-47	RETAINING RING	61	MB6901-61	BALL BEARING (688ZZ)
30	MB6901-30	BEVEL GEAR			