


EXPLODED VIEW

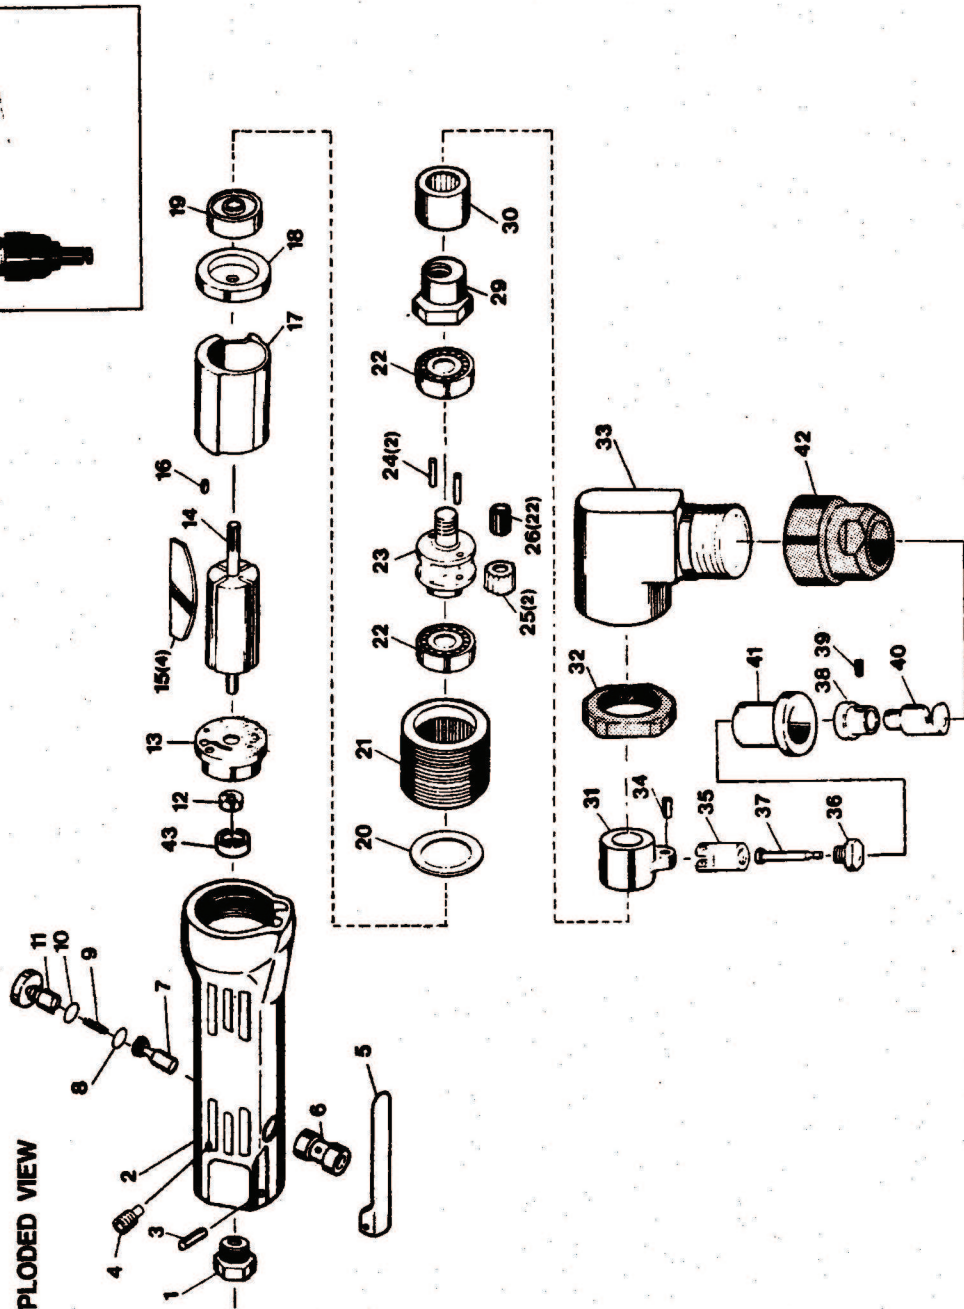

"WARNING"

1. Wear safety goggles when using this tool.
2. Use blade approved for speed and material. Keep blade sharp.
3. Make sure lock ring is tightened to avoid injury.
4. Make sure set screw is tightened after replacing blade.
5. Disconnect tool when not in use.

INDEX	PART NO.	DESCRIPTION	QTY
1	AR134-01	Inlet Bushing	1
2	AR134-02	Motor Housing	1
3	AR133-02	Throttle Lever Pin	1
4	AR134-04	Regulator Stop Set Screw	1
5	AR134-05	Throttle Lever	1
6	AR134-06	Valve Bushing	1
7	AR134-07	Throttle Valve	1
8	AR134-08	Throttle Valve O-Ring	1
9	AR134-09	Throttle Valve Spring	1
10	AR134-10	Regulator O-Ring	1
11	AR134-11	Air Regulator	1
12	AN5215-12	Rear Rotor Ball Bearing	1
13	AR133-12	Rear End Plate	1
14	AR133-13	Rotor	1
15	AR133-14	Rotor Blade	4
16	AR133-15	Dowel Pin	1
17	AR133-16	Cylinder	1
18	AR133-17	Front End Plate	1
19	ADG200-20	Front Rotor Ball Bearing	1
20	AR133-20	Internal Gear Washer	1
21	AN5215-21	Internal Gear	1
22	AR133-21	Planet Cage Ball Bearing	2
23	AN5215-23	Planet Cage	1
24	AR133-25	Planet Gear Pin	2
25	AR134-26	Planet Gear	2
26	AR134-27	Needle Roller	22
29	AN5215-29	Crank Nut	1
30	AN5215-30	Crank Nut Needle Bearing	1
31	AN5215-31	Rod	1
32	AN5215-32	Lock Ring	1
33	AN5215-33	Angle Housing	1
34	AN5215-34	Rod Pin	1
35	AN5215-35	Shaft Guide	1
36	AN5215-36	Punch Stopper Nut	1
37	AN5215-37	Punch Cutter	1
38	AN5215-38	Die Holder	1
39	AN5215-39	Die Stopper Set Screw	1
40	AN5215-40	Cutting Die	1
41	AN5215-41	Angle Housing Bushing	1
42	AN5215-42	Die Holder Nut	1
43	AR133-48	Ball Bearing Cap	1

The types and specifications may be changed with or without notice.