
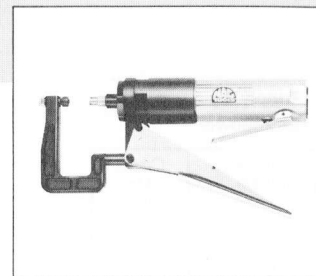


ASD 920 SPOT WELD DRILL

MAC TOOLS AIR TOOLS

EXPLODED VIEW

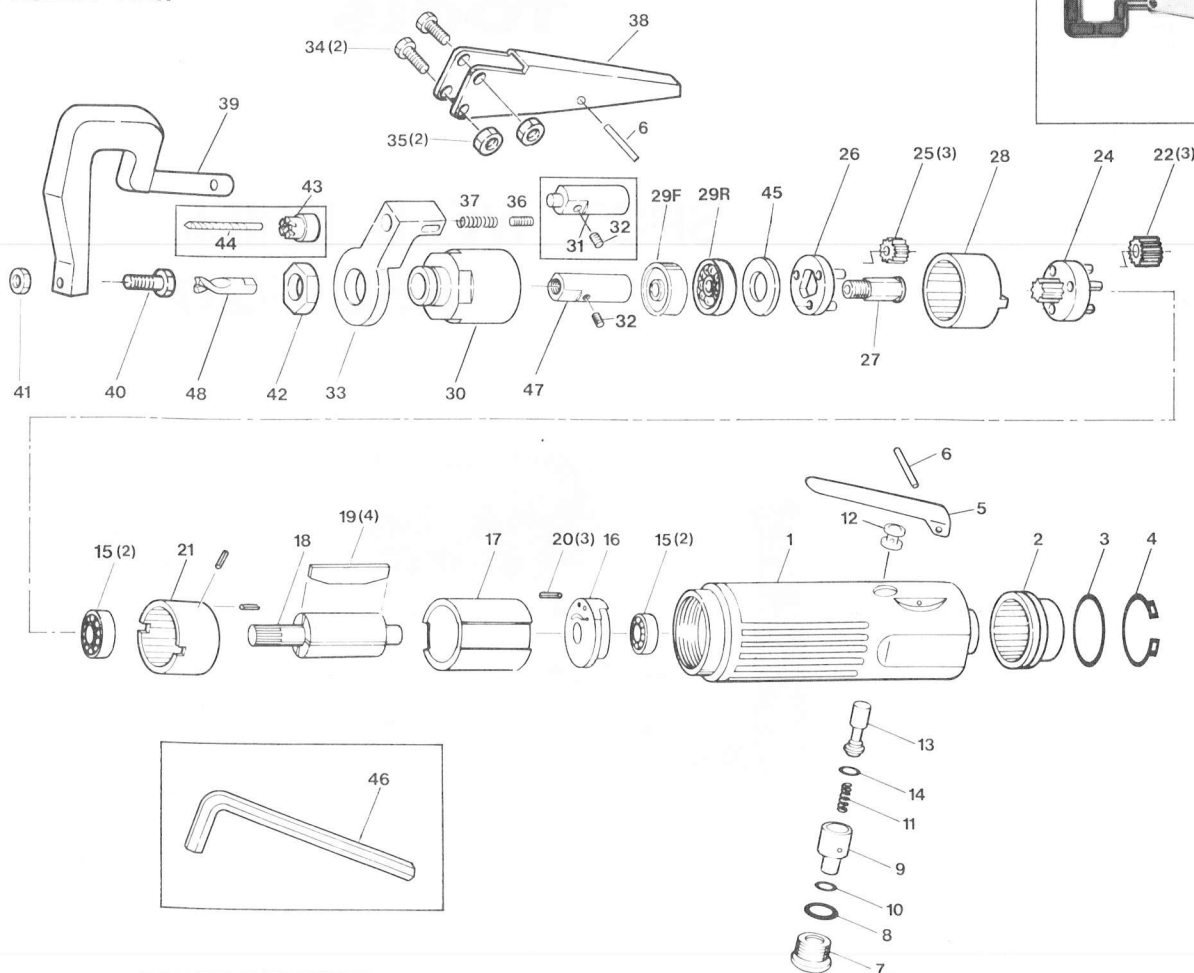

INDEX	PART NO.	DESCRIPTION	QTY.
1	ASD920-01	Motor Housing	1
2	AGS450-11	Exhaust Sleeve	1
3	AGS450-39	Exhaust Sleeve O-Ring	1
4	AGS450-12	Exhaust Sleeve Retaining Ring	1
5	AR134-05	Throttle Lever	1
6	AR133-02	Throttle Lever & Grip Handle Pin	2
7	ADG210-01	Valve Screw	1
8	AW136-16	Valve Screw O-Ring	1
9	ADG210-04	Air Regulator	1
10	AR133-06	Regulator O-Ring	1
11	AR134-09	Throttle Valve Spring	1
12	AR134-06	Valve Bushing	1
13	AR134-07	Throttle Valve	1
14	AR134-08	Throttle Valve O-Ring	1
15	AR133-11	Front & Rear Rotor Ball Bearing	2
16	AGS450-14	Rear End Plate	1
17	ADG210-17	Cylinder	1
18	ASD920-18	Rotor	1
19	AD527-20	Rotor Blade	4
20	AR760-14	Dowel Pin	3
21	ASD920-21	Internal Gear with Front End Plate	1
22	ASD920-22	Planet Gear for Planet Carrier	3
24	ASD920-24	Planet Carrier with Pin	1
25	AD527-09	Planet Gear for Planet Cage	3
26	ASD920-26	Planet Cage with Pin	1
27	ASD920-27	Spindle Shaft	1
28	ASD920-28	Internal Gear	1
29F	AD511-16	Spindle Shaft Ball Bearing (sealed)	1
29R	AR133-21	Spindle Shaft Ball Bearing (open)	1
30	ASD920-30	Clamp Nut	1
31	ASD920-31	Spindle	1
32	ASD920-32	Spindle Set Screw	1
33	ASD920-33	Arm Base	1
34	ASD920-34	Grip Handle Set Bolt	2
35	ASD920-35	Grip Handle Hexagon Nut	2
36	ASD920-36	Arm Base Set Screw	1
37	ASD920-37	Arm Spring	1
38	ASD920-38	Grip Handle	1
39	ASD920-39	Arm	1
40	ASD920-40	Cut In Adjusting Bolt	1
41	ASD920-41	Adjusting Bolt Hexagon Nut	1
42	ASD920-42	Lock Nut	1
43	ASD920-43	Cutter	1
44	ASD920-44	Drill Bit	1
45	AR2760C-23	Planet Cage Seal Plate	1
46	ASD920-46	Hex. Key Wrench	1
47	ASD920E-47	Spindle	1
48	ASD920E-48	End Mill	1

The types and specifications may be changed with or without notice.

"WARNING"

1. Wear safety goggles when using this tool.
2. Select a drill bit of proper size, sharp.
3. Make sure set screw is tightened after replacing a drill bit.
4. Make sure lock nut is not loose.
5. Disconnect the air hose when adjusting the spot drill.