

AWMC140

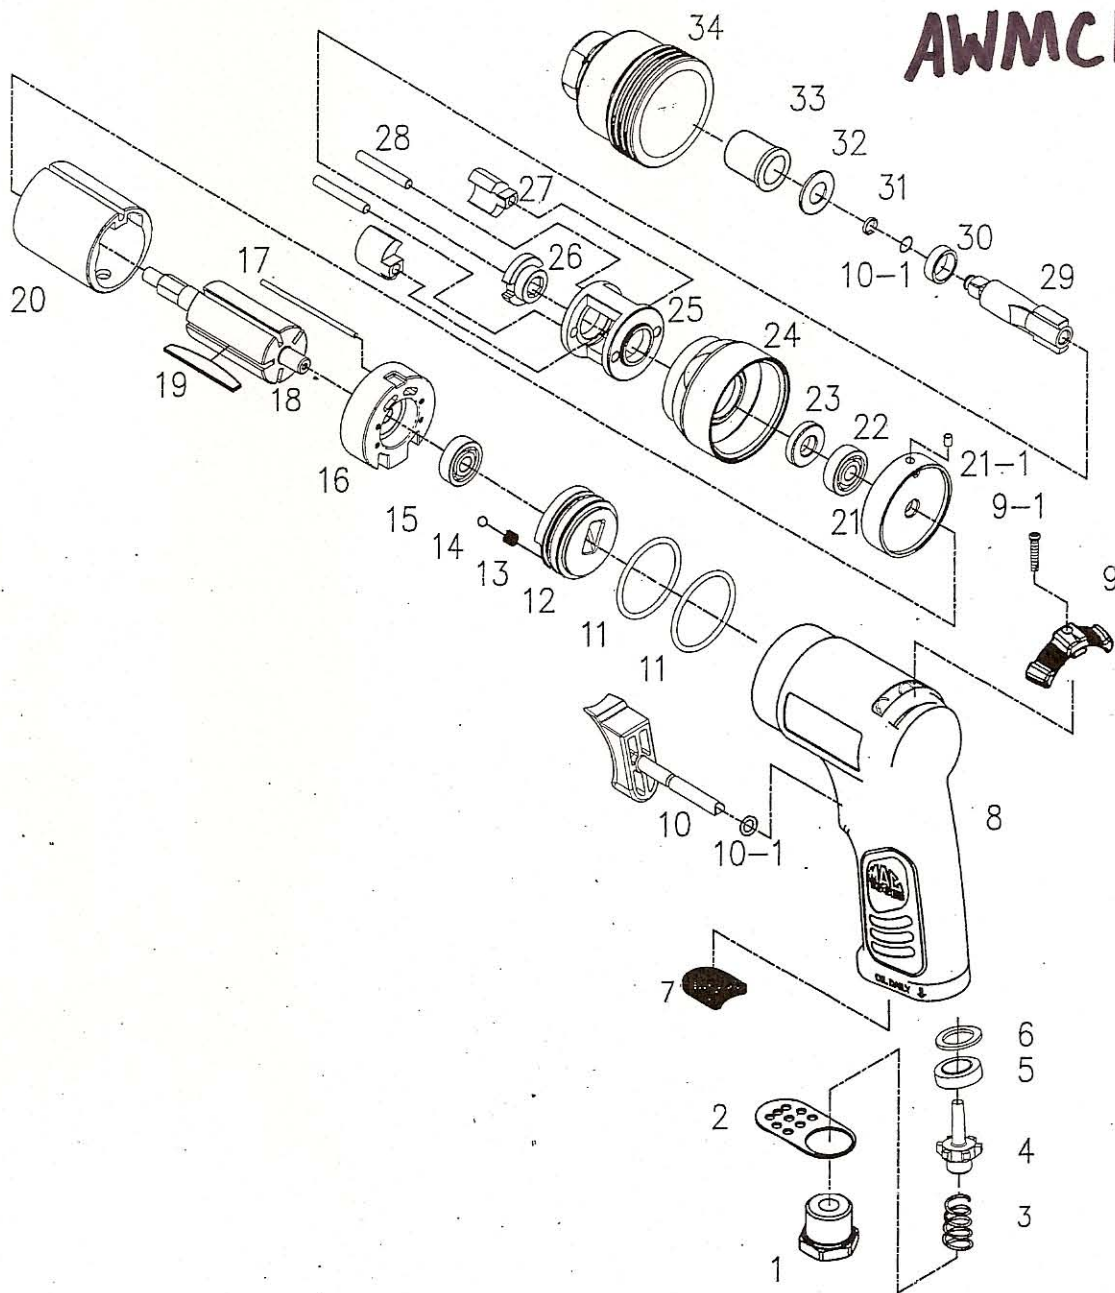


FIG NO.	PART NO.	DESCRIPTION	PCS	FIG NO.	PART NO.	DESCRIPTION	PCS
1	AWMC140-01	Inlet Bushing	1	21	AWMC140-23	Front Plate	1
2	AWMC140-02	Deflector	1	21-1	AWMC140-24	Spring Pin (2.5X4)	1
3	AWMC140-03	Valve Spring	1	22	AWMC140-25	Ball Bearing	1
4	AWMC140-04	Valve	1	23	AWMC140-26	Motor Spacer	1
5	AWMC140-05	Valve Seat	1	24	AWMC140-27	Impact Adaptor Ring-M2	1
6	AWMC140-06	Spacer	1	25	AWMC140-28	Hammer Cage	1
7	AWMC140-07	Silencer	1	26	AWMC140-29	CAM	1
8	AWMC140-08	Composite Housing	1	27	AWMC140-30	Hammer	2
9	AWMC140-09	Reverse Valve Lever	1	28	AWMC140-31	Hammer Pin	2
9-1	AWMC140-10	Screw	1	29	AWMC140-32	1/4" Sq. Anvil	1
10	AWMC140-11	Trigger	1	30	AWMC140-33	Anvil Bushing	1
10-1	AWMC140-12	O-Ring	2	31	AWMC140-34	Socket Retainer	1
11	AWMC140-13	O-Ring	2	32	AWMC140-35	Spacer	1
12	AWMC140-14	Valve Body	1	33	AWMC140-36	Hammer Case Bushing	1
13	AWMC140-15	Spring	1	34	AWMC140-37	Hammer Case	1
14	AWMC140-16	Detent Ball	1				
15	AWMC140-17	Ball Bearing (626ZZ)	2				
16	AWMC140-18	Rear Plate	1				
17	AWMC140-19	Guide Pin	1				
18	AWMC140-20	Rotor	1				
19	AWMC140-21	Rotor Blade	6				
20	AWMC140-22	Cylinder	1				