 




STANLEY®

FATMAX®

EN

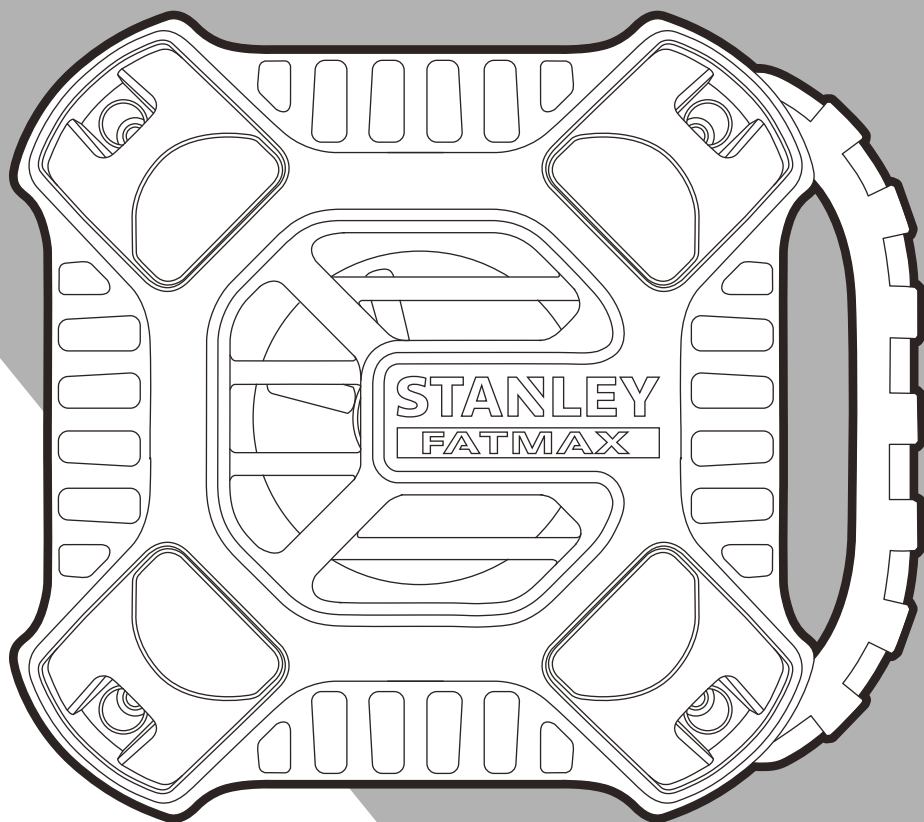

  FMC772B

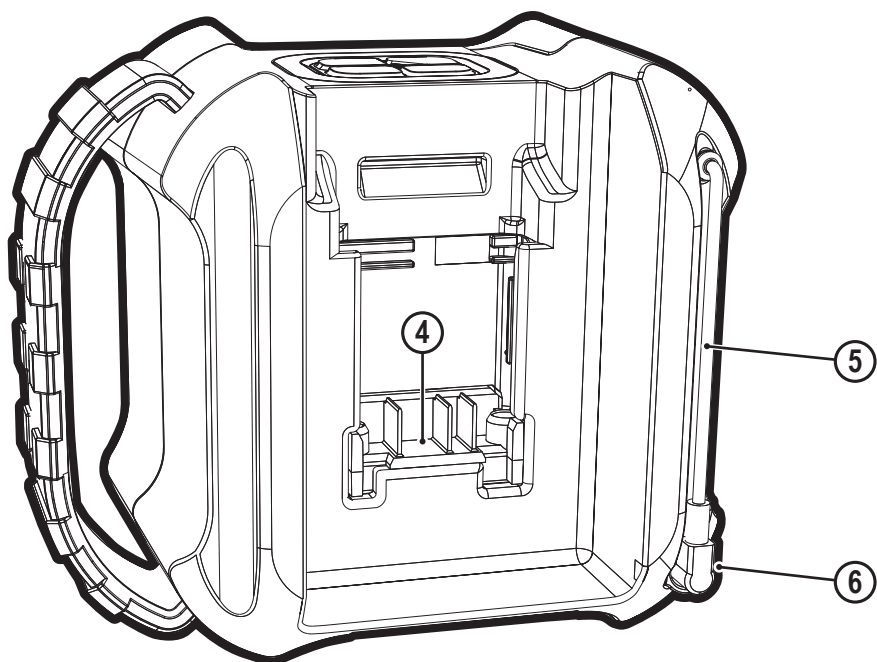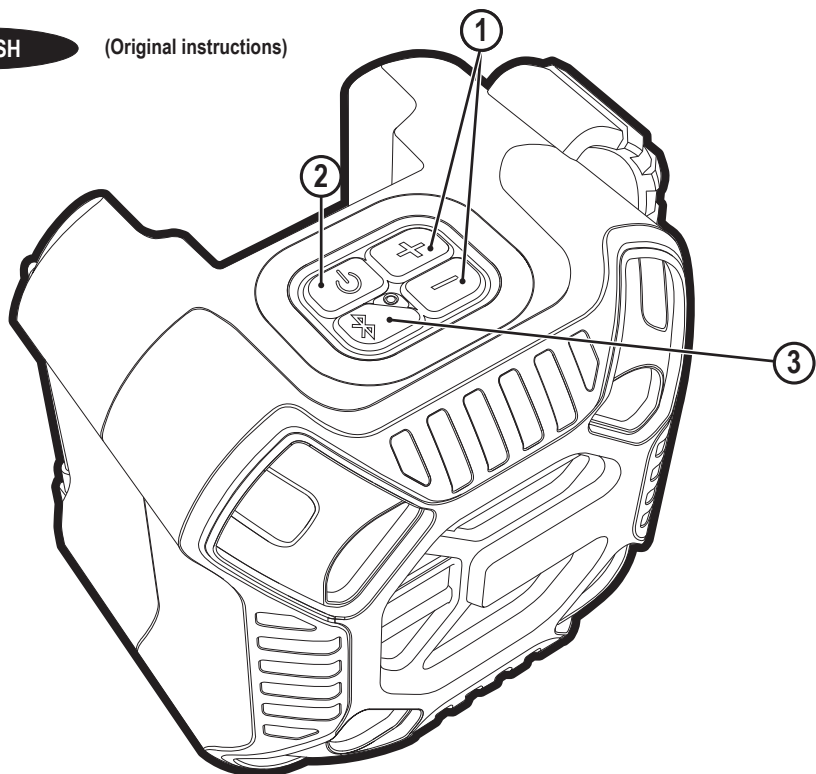

Intended use

Your Stanley FatMax FMC772B Bluetooth speaker has been designed for receiving audio transmission from Bluetooth enabled devices. This appliance is intended for professional and consumer use.

Safety instructions

General safety warnings



Warning! Read all safety warnings and all instructions. Failure to follow the warnings and instructions listed below may result in injury.

- ◆ Read all of this manual carefully before using the appliance.
- ◆ The intended use is described in this manual. The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.
- ◆ Retain this manual for future reference.

Using your appliance

- ◆ Always take care when using the appliance.
- ◆ The appliance is not to be used as a toy.
- ◆ Use in a dry location only. do not allow the appliance to become wet.
- ◆ Do not immerse the appliance in water.
- ◆ Do not open body casing. There are no user serviceable parts inside.
- ◆ Do not operate the appliance in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.
- ◆ To reduce the risk of damage to plugs and cords never pull the cable to remove the plug from a socket outlet.

After use

- ◆ When not in use, the appliance should be stored in a dry place.
- ◆ Children should not have access to stored appliances.
- ◆ When the appliance is stored or transported in a vehicle it should be placed in the boot or restrained to prevent movement following sudden changes in speed/direction.

Inspection and repairs

- ◆ Before use, check the appliance for damaged or defective parts. Check for breakage of parts, damage to switches and any other conditions that may affect its operation.
- ◆ Do not use the appliance if any part is damaged or defective.
- ◆ Have any damaged or defective parts repaired or replaced by an authorized repair agent.

- ◆ Never attempt to remove or replace any parts other than those specified in this manual.

Safety of others

- ◆ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ◆ Children must be supervised to ensure that they do not play with the appliance.

Residual risks.

Additional residual risks may arise when using the tool which may not be included in the enclosed safety warnings. These risks can arise from misuse, prolonged use etc.

Even with the application of the relevant safety regulations and the implementation of safety devices, certain residual risks can not be avoided. These include:

- ◆ Injuries caused by touching any rotating/moving parts.
- ◆ Injuries caused when changing any parts, blades or accessories.
- ◆ Injuries caused by prolonged use of a tool. When using any tool for prolonged periods ensure you take regular breaks.
- ◆ Impairment of hearing.
- ◆ Health hazards caused by breathing dust developed when using your tool (example:- working with wood, especially oak, beech and MDF).

Labels on appliance

The following warning symbols are found on the appliance:



To reduce the risk of injury, the user must read the instruction manual.

Additional safety instructions for batteries and chargers

Batteries (not supplied)

- ◆ Never attempt to open for any reason.
- ◆ Do not expose the battery to water.
- ◆ Do not store in locations where the temperature may exceed 40 °C.
- ◆ Charge only at ambient temperatures between 10 °C and 40 °C.
- ◆ When disposing of batteries, follow the instructions given in the section "Protecting the environment".
- ◆ Do not damage/deform the battery pack either by puncture or impact, as this may create a risk of injury and fire.
- ◆ Do not charge damaged batteries.
- ◆ Under extreme conditions, battery leakage may occur.

When you notice liquid on the batteries Carefully wipe the liquid off using a cloth. Avoid skin contact.

- ◆ In case of skin or eye contact, follow the instructions below.

Warning! The battery fluid may cause personal injury or damage to property. In case of skin contact, immediately rinse with water. If redness, pain or irritation occurs seek medical attention. In case of eye contact, rinse immediately with clean water and seek medical attention.

Features

This appliance includes some or all of the following features.

1. Volume buttons
2. Power button
3. Bluetooth® / Auxiliary mode button
4. 18v battery port
5. Auxiliary jack
6. Auxiliary jack holder

Use

Power/Volume Adjustment

To operate as a cordless product, insert a fully charged 18v Stanley FatMax battery (not included) into the battery port. Be sure battery is fully seated.

To turn the speaker on, press the power button (2). Press the power button again to turn the speaker off.

Press the "+" button (1) to increase the volume. To decrease the volume, press the "-" button.



Bluetooth® and auxiliary function

When the speaker is turned on, it will automatically be in Bluetooth mode. To switch to auxiliary mode, press and hold the Bluetooth button (3) until the light turns green. To switch back to Bluetooth mode, simply press and hold the Bluetooth button again. The blue light will flash again.



Using Bluetooth® Wireless Technology*

- ◆ Turn the speaker on.
- ◆ The speaker should already be in Bluetooth mode. If not, press the Bluetooth button (3).
- ◆ Find "P3BTS" under devices on your Bluetooth enabled device and select to pair. The blue light will flash while the pairing takes place. Once the pairing is successful the blue light will remain steady.

- ◆ Begin playing music on your device.

Note: The speaker does not have to be in the Bluetooth mode when pairing, only when listening.

*The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Stanley FatMax is under license. Other trademarks and trade names are those of their respective owners.

Listening in auxiliary mode

To listen to a device in auxiliary mode, press and hold the Bluetooth button (3) until the blue light turns green. Plug the auxiliary jack (5) into the auxiliary port of your device.

When finished, unplug the jack and store it in the auxiliary jack holder (6).

Incoming Call

If your phone receives a call while it is connected to the speaker it will ring through the speaker.

Samsung**

To transfer the call to your phone, deselect the headset option on your phone. The speaker will remain mute until the call is over. End the call normally with your cell phone. The speaker will resume previous function.

**Samsung® is a registered trademarks of Samsung Group.

iPhone***

To transfer the call to your phone, select "audio source" on your phone, then select "iPhone." The speaker will remain mute until the call is over. End the call normally with your cell phone. The speaker will resume previous function.

***iPhone® is a registered trademark of Apple Inc.

Troubleshooting

If your appliance seems not to operate properly, follow the instructions below. If this does not solve the problem, please contact your local Stanley FatMax repair agent.

Warning! Before proceeding, unplug the appliance.

Problem	Possible Solution	Possible Cause
Unit will not power on	Battery is not charged	Charge battery
	Battery is not fully connected	Push battery fully into the battery port and ensure it is properly connected
	Battery does not have enough power	Charge battery
Bluetooth® disconnected	Battery has been removed	Replace battery
	Device roamed out of range	Bring device into range of Bluetooth speaker
		Device may need to be paired to the Bluetooth again, see "Using Bluetooth Wireless Technology"
		If two or more devices are paired to speaker, disconnect the speaker in the settings of the one of the devices.

Should you find one day that your Stanley Fat Max product needs replacement, or if it is of no further use to you, do not dispose of it with household waste. Make this product available for separate collection.



Separate collection of used products and packaging allows materials to be recycled and used again. Re-use of recycled materials helps prevent environmental pollution and reduces the demand for raw materials.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.

Stanley FatMax provides a facility for the collection and recycling of Stanley FatMax products once they have reached the end of their working life. To take advantage of this service please return your product to any authorised repair agent who will collect them on our behalf.

You can check the location of your nearest authorised repair agent by contacting your local Stanley FatMax office at the address indicated in this manual. Alternatively, a list of authorised Stanley Fat Max repair agents and full details of our after-sales service and contacts are available on the Internet at: www.2helpU.com

Batteries



At the end of their useful life, discard batteries with due care for our environment:

- ◆ Run the battery down completely, then remove it from the tool.
- ◆ NiCd, NiMH and Li-Ion batteries are recyclable. Place the battery(s) in a suitable packaging to ensure that the terminals cannot be short-circuited. Take them to any authorised repair agent or a local recycling station.
- ◆ Do not short-circuit the battery terminals.
- ◆ Do not dispose of the battery(s) in a fire as this may result in a risk of personal injury or an explosion.

Maintenance

Your Stanley FatMax corded/cordless appliance/tool has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper tool/appliance care and regular cleaning.

Warning! Switch off and unplug the appliance before carrying out any cleaning.

- ◆ Dirt and grease may be removed from the exterior of the appliance using a cloth.

Warning! NEVER use solvents or other harsh chemicals for cleaning the non-metallic parts of the appliance. These chemicals may weaken the materials used in these parts. Use a cloth dampened only with water and mild soap. Never let any liquid get inside the unit; never immerse any part of the unit into a liquid.

Warning! NEVER spray or in any other way apply lubricants or cleaning solvents inside the tool. This can seriously affect the life and performance of the tool.

Service Notes

This product is not user serviceable. There are no user serviceable parts inside the radio. Servicing at an authorized service center is required to avoid damage to static sensitive internal components.

Protecting the environment



Separate collection. This product must not be disposed of with normal household waste.

Australia & New Zealand

Stanley Black & Decker

82 Taryn Drive, Epping, VIC 3076 Australia

Tel. 1800 338 002 (Aust) or Tel. 0800 339 258 (NZ)