




## 20 Litre Microwave Oven

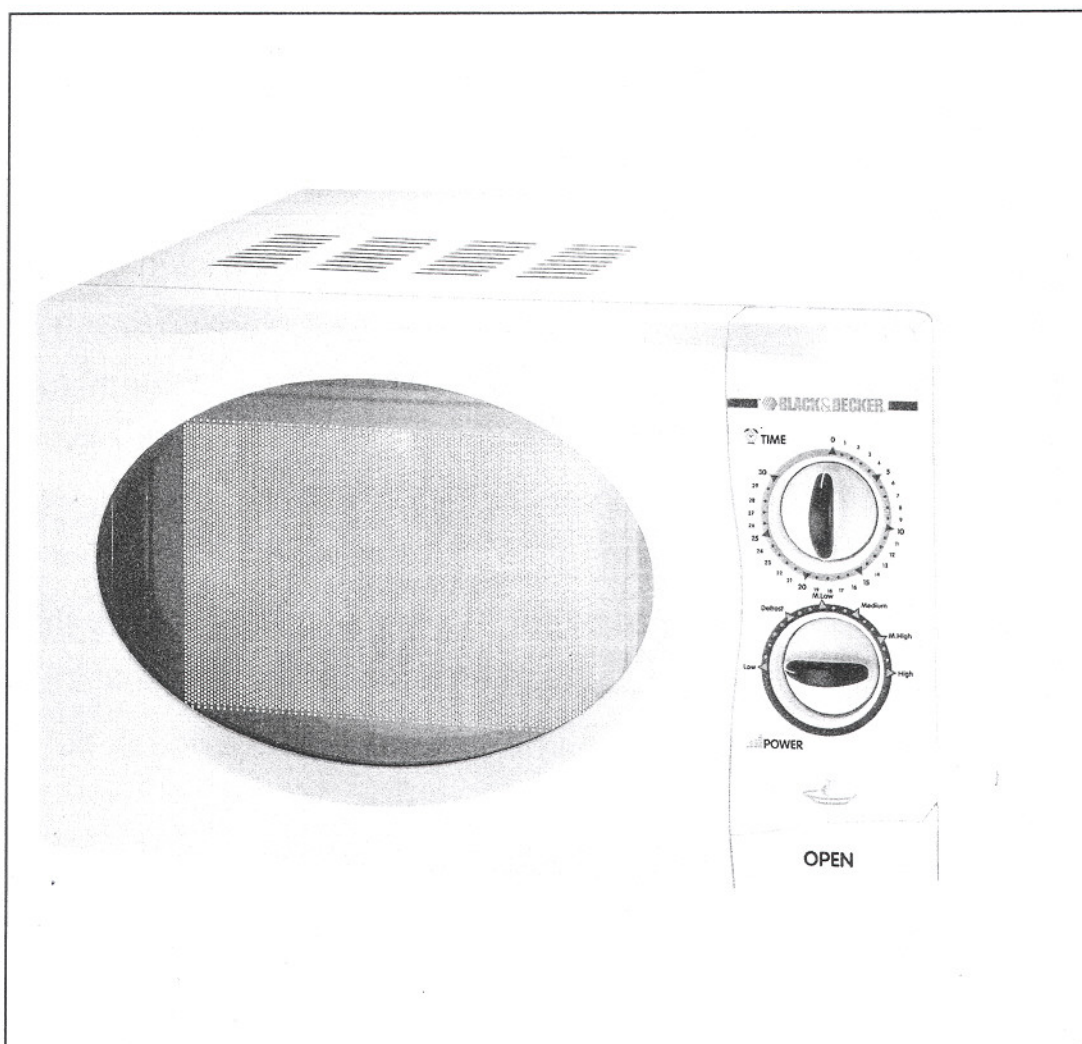

### First Use Safety Recommendation

Please read through this booklet for safe and efficient use of the appliance. We urge you to read the "Important Safeguards" section and also follow all detailed instructions even if you are familiar with a similar appliance.

Keep this guide handy for future reference.

**MX20P**

## IMPORTANT SAFEGUARDS


When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should be followed, including the following:

- ✦ Read all instructions carefully, even if you are familiar with the appliance.
- ✦ To protect against the risk of electric shock, DO NOT IMMERSE the appliance, cord set or plug in water or other liquids.
- ✦ To clean, wipe the exterior with a damp cloth.
- ✦ Close supervision is necessary when any appliance is used by or near children. Never leave an appliance unattended when in use.
- ✦ Switch off and remove the plug from the power outlet when not in use before assembling or disassembling parts, and pull from power outlet. Never pull the cord.
- ✦ Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return the complete appliance to your nearest authorised service facility for examination, electrical repair, mechanical repair or adjustment.
- ✦ The use of attachments or accessories not recommended or sold by this appliance manufacturer may result in fire, electric shock or personal injury.
- ✦ Do not let the cord hang over the edge of a table, counter, or touch hot surfaces.
- ✦ Avoid touching hot surfaces, use handles and knobs.
- ✦ Do not operate or place any part of this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
- ✦ Do not abuse the cord. Never carry the appliance by the cord or yank it to disconnect it from the outlet; instead, grasp the plug and pull to disconnect.
- ✦ When using an extension cord with your appliance, make sure the extension cord is correctly wired and rated for its use.
- ✦ This product is intended for household use only.
- ✦ Do not attempt to repair the appliance yourself; instead, take it to your Black & Decker-Owned or Authorised Service Centre for repair.

**SAVE THESE INSTRUCTIONS**

## Parts Identification

1. Door safety lock system
2. Oven window
3. Oven air vent
4. Shaft
5. Roller ring
6. Glass tray
7. Control panel
8. Door release button

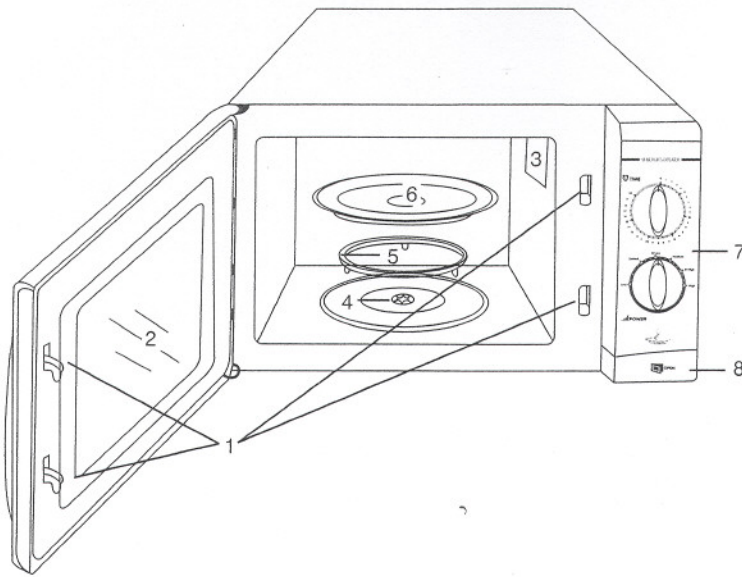

## Your 20 Litre Microwave Oven Features

- **20 Litre Capacity** ideal for a family
- **Power knob** sets the cooking power level
- **Timer** sets the cooking time
- **Door release button** releases lock system to open door.
- **6 Power levels** to suit a variety of needs.
- **Defrost option** to thaw food for cooking.

## How to install your Microwave Oven

Make sure that all the packing material is removed from the inside of the door.

**Warning:** Check the microwave oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. The door should fit squarely and securely and open and close smoothly. The door seals are free from food and have no burn marks. If there is any damage, please do not operate the microwave oven & contact the qualified service personnel.

### **Practical Hints:**

- The microwave oven should be placed on a flat stable surface which can hold the weight of the microwave oven and the heaviest of food likely to be cooked inside.
- Do not place the microwave oven where heat, moisture, or high humidity are generated or near combustible materials.
- For correct operation, the microwave oven must have sufficient airflow (20 cms above, 10 cms at the back, 5 cms on both sides). Do not cover or block any openings.
- Do not remove the feet.
- Do not place anything on top of the oven.
- Do not operate the microwave oven without the glass tray, roller support and shaft in their proper positions.
- Make sure that the power supply cord is undamaged and does not run under the microwave oven or over any hot or sharp surfaces.
- Ensure that the socket is readily accessible so that it can be easily unplugged in case of emergency.
- Do not use the microwave oven outdoors.

- The appliance must be grounded. The oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall socket that is properly installed and grounded as it reduces the risk of electric shock in case of short circuit. Using a high voltage is dangerous and may result in a fire or other accidents causing the oven damage.


**Note:** Improper use of the grounding plug can result in a risk of electric shock. The microwave oven should be operated on a separate circuit from other appliances. Failure to do so may cause the power board fuse to blow, and or food to cook slower.

### How to use your Microwave Oven

The appliance is intended to heat, cook or dry food for household use only.

- Arrange the food carefully. Place the thickest areas towards the outside of the dish.
- Watch the cooking time. Cook for the shortest amount of time and add more as required. Food severely overcooked can smoke or ignite thereby causing damage.
- Ensure that you cover the food while cooking. Covers prevent splattering and the food cooks evenly.
- Turn foods over once during the cycle to speed cooking of foods such as chicken & burgers. Large items like roasts must be turned over at least once.
- Rearrange foods such as meat balls halfway through the cooking cycle both from top to bottom and centre of the dish to the outside.

### CONTROL PANEL

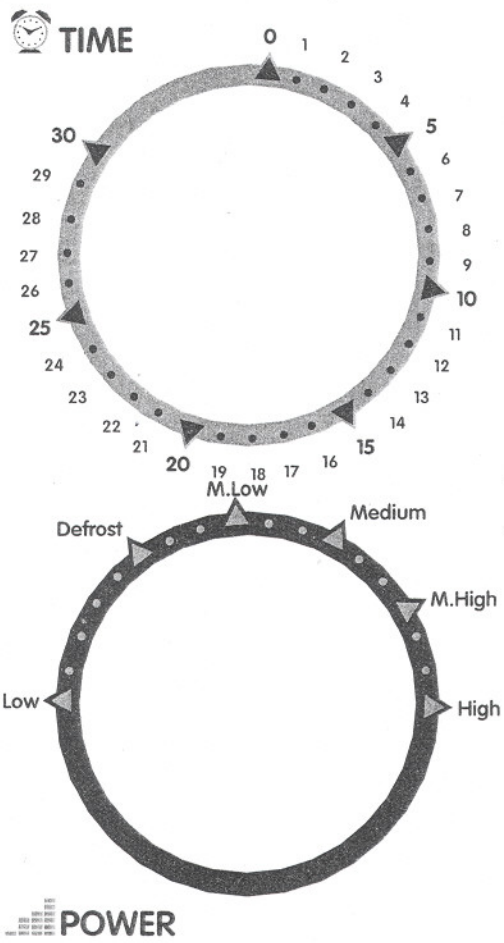

#### TIMER KNOB

Offers visual timing settings at easy turn of your thumb to select a desired cooking time up to 30 minutes per cooking session.

#### POWER/ACTION KNOB

You use this operator knob to choose a cooking power level. It is the first step to start a cooking session.


#### MICROWAVE COOKING

For pure microwave cooking, there are six power settings from which to chose one best fits to do the job at hand.

Microwave cooking power increases by turning the knob clockwise. The power levels can be classified as the following:

	POWER OUTPUT	DESCRIPTION
1.	100%	HIGH
2.	85%	M.HIGH
3.	66%	MED
4.	48%	M.LOW
5.	40%	DEFROST
6.	17%	LOW

MICROWAVE COOKING

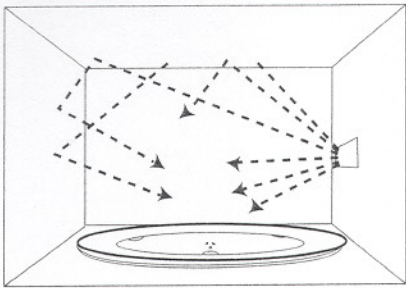

To start a cooking session,

- 1. Place food in oven and close the door.
- 2. Turn Power Selector to select a power level.
- 3. Use Timer knob to set a cooking time.

NOTE:

As soon as the timer is turned, oven starts cooking.  
When selecting time for less than 2 minutes, turn timer past 2 minutes and then return to the correct time.

CAUTION: ALWAYS RETURN TIMER BACK TO ZERO POSITION if food is removed from oven before the set cooking time is complete or when oven is not in use. To stop oven during cooking process, push the door release button and open the door.

How to care for your microwave oven

Utensils permissible for use in microwave oven:

- Use utensils which allow the energy to pass through the container and heat the food. Only use a temperature probe recommended for this microwave oven.
- Do not use metal or dishes with metallic trim.
- Do not use recycled paper products as they may contain small metal fragments which may cause sparks or fires.
- Round or oval dishes are recommended rather than square / oblong ones as food in corners tends to overcook.
- Narrow strips of aluminium foil may be used to prevent over-cooking of exposed areas. But be careful not to use too much and keep a distance of 1 inch between the foil and cavity.

COOKWARE	MICROWAVE
Heat Resistant glass	Yes
Non Heat Resistant glass	No
Heat Resistant Ceramics	Yes
Microwave safe plastic dishes	Yes
Kitchen paper	Yes
Metal Tray	No
Metal Rack	No
Aluminium foils & foil containers	No

- The oven should be cleaned ocassionally, particularly around the door seal area.

- Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray or other harsh cleaners as they may stain, streak or dull the door surface.
- Turn off the oven and remove the power plug from the socket before cleaning.
- The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilating openings.
- Wipe the doors and window on sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaners.
- Do not allow the operating panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave the oven door open to prevent the oven from accidentally turning on.
- If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition and it is normal.
- The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from the cavity floor for cleaning be sure to replace in the proper position.
- Remove odours from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl. Microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
- When it becomes necessary to replace the oven light, please contact the nearest Black & Decker service concessionaire.

## Important instructions

1. Do not tamper with or deactivate the interlocking devices on the door.
2. Never poke an object, particularly a metal object between the door and the oven while the oven is in operation.
3. Do not operate the microwave when empty.
4. To reduce the risk of fire in the oven cavity:
  - a. When heating the food in plastic or paper container, keep an eye on the oven due to the possibility of ignition.
  - b. Remove the wire twist-ties from paper or plastic bags before placing in oven.
  - c. If smoke is observed, switch off or unplug the microwave oven and keep the door closed to stifle any flames.
  - d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
5. Liquid or other foods must not be heated in sealed containers as they are liable to explode.
6. Microwave heating of beverage can result in delayed eruptive boiling; therefore care has to be taken when handling the container.
7. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
8. Eggs in their shell and whole hard boiled eggs should not be heated in the microwave ovens since they may explode even after microwave heated has ended.
9. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
10. The content of feeding bottles and baby food jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
11. Utensils should be checked to ensure that they are suitable for use in microwave oven. (Please refer to table provided in Utensils permissible section) You can also carry out a test to ensure that it is microwave safe. Place the empty utensil in the microwave oven at high power for 60 seconds. A utensil which becomes very hot should not be used. Never do this with metal utensils.

12. Do not remove the outer panel from the oven.
13. Do not strike or hit the control panel. Damages can occur.
14. Oven gloves/Pot holders may be needed as needed as heat from food is transferred to the cooking container and from the container to the glass tray. The glass tray can be very hot after removing the cooking container from the oven.
15. Cooking utensils may become hot because of the heat transferred from the heated food. Oven gloves / Pot holders should be used needed to handle the utensils.
16. Do not store flammable materials next to or on top of or in the oven. It could be a fire hazard.
17. Do not cook food directly on the glass tray unless indicated in the recipes. (Food should be placed in a suitable cooking utensil)
18. Do not use this oven to heat chemicals or other non-food products. Do not clean this oven with any product that is labelled as containing corrosive chemicals. The heating of corrosive chemicals in the oven may cause microwave radiation leaks.
19. When using the combination mode, never place any aluminium or metal container directly on the oven rack. Always insert a heat proof, glass plate or dish between the oven rack and the aluminium container. This will prevent sparking that may damage the oven.
20. Never use the oven rack when cooking in the microwave mode.
21. Do not use the oven for home canning or heating of any closed jar. Pressure will build up and the jar may explode. In addition, the microwave oven cannot maintain the food at the correct canning temperature. Improperly canned food may spoil and be dangerous to consume.
22. It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover that gives protection against exposure to microwave energy.
23. Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
24. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation. Regular cleaning is advised.
25. It is not recommended that this product is used by children.
26. Never leave metal utensils in the Microwave.

## **BEFORE REQUESTING SERVICE:**

### THINGS WHICH MAY HAPPEN AND ARE NORMAL:

1. You may experience some radio interference to your radio, TV or similar equipment. When there is interference, it may be reduced or eliminated by taking the following measures:
  - a. Clean the door and sealing surfaces of the oven.
  - b. Reorient the receiving antenna of radio or television.
  - c. Relocate the microwave oven with respect to the receiver.
  - d. Move the microwave oven away from the receiver.
  - e. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.
2. During cooking, when food heats up, the warm air generated circulates inside the oven cavity which may escape through the vents. Some of it may condense into steam and accumulate on the oven door.
3. There may be humming and clicking sound when cooking by Combination as the oven automatically switches from microwave power to Grill to create a combination setting making the sound.

PROBLEM	POSSIBLE CAUSE	REMEDY
<b>Oven will not turn on</b>	The oven is not properly connected.	Remove the plug from the socket. Wait for 10 seconds and then reinsert.
	Circuit breaker or fuse is tripped.	Reset the circuit breaker or replace the fuse.
	The socket may not be working.	Test the socket with another appliance.
<b>Oven will not start cooking.</b>	The door is not properly closed.	Close the door properly.
	START button was not pressed.	Press the START button.
	Another program has already been entered in the oven.	Press cancel button to cancel the program and then program again.
	The program has not been properly entered.	Program properly according to Operating Instructions.
	CANCEL button was pressed accidentally.	Program the oven over again.
<b>When the oven is on, noise is emitted from the glass tray.</b>	The roller ring and the oven button are dirty.	Clean the parts according to 'How to care for your Microwave Oven.

المشكلة	السبب المحتمل	العلاج
الفرن لا يعمل	الفرن غير موصول بصورة سليمة	انزع القابس من المقبس انتظر لمدة ١٠ ثوان ثم أعد ادخا
	قاطع الدارة الكهربائية أو المصهرة مفصولة قد يكون المقبس معطل	ارح قاطع الدارة الكهربائية أو استبدل المصهرة افحص المقبس بجهاز آخر
الفرن لا يطهو	الباب غير مغلق بشكل صحيح زر التشغيل غير مضغوط برنامج اخر جرى ادخاله في الفرن	أغلق الباب بالشكل الصحيح اضغط زر التشغيل اضغط زر الإلغاء لإلغاء البرنامج والبرمجة من جدي برمج بشكل صحيح بحسب إرشادات التشغيل
	البرنامج لم يتم إدخاله بالشكل الصحيح	قم ببرمجة الفرن من جديد
	زر الإلغاء مضغوط بصورة عفوية	نظف الأجزاء الوسخة بحسب "كيفية الاعتناء بفرن المايكروويف"
عند تشغيل الفرن يصدر ضجيج عن الصينية الزجاجية	الحلقة الدوارة وأزرار الفرن وسخة	

الفارغ في فرن المايكروويف على طاقة عالية لمدة ٦٠ ثانية. ويجب عدم استخدام الاناء الذي يصبح ساخنا جدا. لا تستخدم اناء معدنيا أبدا.

١٢- لا تنزع اللوح الخارجي عن الف

١٣- لا تصدم أو تضرب لوحة التحكم، حيث يمكن ان يتسبب ذلك في حدوث أضرار.

١٤- قد تحتاج إلى ارتداء قفازات خاصة بالفرن لان الحرارة تنتقل من الطعام إلى وعاء الطهي ومن الوعاء إلى الصينية الزجاجية.

والصينية الزجاجية يمكن ان تكون ساخنة جدا بعد اخراج وعاء الطهي من الفرن

١٥- اواني الطبخ يمكن ان تصبح ساخنة بسبب الحرارة المنتقلة من الطعام المسخن. ويتعين استخدام قفازات للفرن للامساك بالاواني.

١٦- لا تقم بتخزين مواد قابلة للاشتعال بجوار أو على سطح أو داخل الفرن. فقد يسبب هذا خطر اندلاع حريق.

١٧- لا تطهو الطعام مباشرة على الصينية الزجاجية ما لم يكن ذلك مشار إليه في الوصفة ( ينبغي وضع الطعام في اناء طبخ ملائم).

١٨- لا تستخدم هذا الفرن لتسخين المواد الكيماوية أو المنتجات غير الغذائية الأخرى. ولا تنظف هذا الفرن بأي منتج مميز باحتوائه

مواد كيماوية حادة. فتسخين مواد كيماوية انة في الفرن قد يتسبب في تسرب اشعاع المايكروويف.

١٩- عند استخدام الوضعية المزدوجة، لا تضع أي وعاء من الألمنيوم أو المعدن مباشرة على شبك الفرن.

وقم دائما بادخال صحن أو طبق زجاجي مقاوم للحرارة بين شبك الفرن ووعاء الألمنيوم. فهذا سيمنع حدوث الشرر الذي قد يتلف

الفرن.

٢٠- لا تستخدم صينية الفرن لدى الطهي بوضعية المايكروويف.

٢١- لا تستخدم الفرن للتعليب المنزلي أو لتسخين أي مرطبان مغلق. فالضغط قد يتعاضم وينفجر المرطبان. وازافة إلى ذلك، فان

فرن المايكروويف لا يمكنه الحفاظ على الطعام بدرجة الحرارة المناسبة للتعليب. والطعام المعلب بطريقة غير سليمة يمكن ان يفسد

ويصبح خطرا لعي الاستهلاك.

٢٢- ان من الخطر على أي شخص غير مختص ان يقوم بإجراء أي صيانة أو اصلاح يتضمن نزع غطاء يحمي من التعرض لطاقة

المايكروويف.

٢٣- لا تسمح للاطفال باستخدام الفرن بدون اشراف إلا بعد ان يتم اعطاؤهم إرشادات كافية بحيث يتمكن الطفل من استخدام

الفرن بطريقة آمنة ويدرك مخاطر الاستخدام غير الصحيح.

٢٤- ان الاخفاق في الحفاظ على الفرن بحالة نظيفة قد يؤدي إلى تدهور وضع السطح مما قد يؤثر سلبا على الحياة الافتراضية

للجهاز وقد ينشأ عنه وضعا خطرا. وينصح بإجراء التنظيف المنتظم.

٢٥- لا ينصح باستخدام هذا المنتج من قبل الأطفال.

٢٦- لا تترك الاواني المعدنية في المايكروويف أبدا.

## قبل طلب الخدمة:

الاشياء التي يمكن ان تحدث وتعد طبيعية:

١- قد تلاحظ وجود بعض التداخل اللاسلكي مع جهاز الراديو، التلفزيون أو جهاز مماثل. وعندما يكون هناك تداخل، فان بالامكان

تخفيفه أو ازالته باتخاذ الإجراءات التالية:

أ- نظف الباب والسطوح المانعة للتسرب في الفرن

ب- غير توجيه هوائي الالتقاط الخاص بالراديو أو التلفزيون.

ج- غير موقع فرن المايكروويف بالنسبة لهوائي الاستقبال.

د- ابعد فرن المايكروويف عن جهاز الاستقبال.

هـ - ضع قابس فرن المايكروويف في منفذ مختلف للكهرباء لكي يكون فرن المايكروويف وجهاز الاستقبال على دارتين كهربائيتين

فرعيتين منفصلتين.

٢- أثناء الطهي، وعندما يسخن الطعام ، فان الهواء الساخن الذي يتولد يتوزع داخل تجويف الفرن مما يتيح احتمال تسربه من

الفتحات الخاصة بالتهوية. ثروبعضه قد يتكثف مشكلا بخار ماء ويتراكم على باب الفرن.


٣- قد يكون هناك صوت طنين وطقطقة لدى الطهي بالوضعية المزدوجة مع تحول لفرن بصورة آلية من طاقة المايكروويف إلى

الشواية لعمل الوضعية المزدوجة.

- يجب تنظيف الفرن بين الحين والآخر، وبخاصة حول منطقة سدادات الباب.
- حافظ على الجزء الداخلي من الفرن نظيفاً وعندما تلتصق نطق الطعام المترشرة والسوائل المسكوبة بجدران الفرن، اسمحها بخرقه رطبة. ويمكن استخدام منظم لطيف إذا توسخ الفرن كثيراً. تجنب استخدام منظفات البخاخ أو المنظفات القاسية الأخرى حيث أنها يمكن أن تحدث بقعاً أو خطوطاً أو بهوت لون سطح الباب.
- ينبغي تنظيف السطوح الخارجية بخرقه رطبة. ولمنع حدوث ضرر لاجزاء التشغيل داخل الفرن، يجب ان لا يسمح للماء بالتسرب عبرفتحات التهوية.
- امسح الأبواب والنافذة على الجانبين وسدادات الباب والاجزاء المتجاورة بشكل متكرر بخرقه رطبة لازالة أية سوائل مسكوبة أو متناثرة. لا تستخدم منظفات مسببة للتآكل.
- لا تجعل البلل يصل الى لوحة التشغيل. ونظفها بخرقه رطبة وناعمة. ولدى تنظيف لوحة التحكم، اترك باب الفرن مفتوحاً للحيلولة دون تشغيل الفرن بصورة عرضية.
- إذا تكون البخار داخل أو حول الواجهة الخارجية لباب الفرن فامسحه بخرقه ناعمة. وهذا يمكن ان يحدث عندما يعمل فرن المايكروويف في ظل رطوبة عالية وهو أمر طبيعي.
- يجب تنظيف الحلقة الدوارة وارضية الفرن بانتظام لتجنب الضجيج المفرط. وببساطة امسح السطح السفلي للفرن بمنظم لطيف. اما الحلقة الدوارة فيمكن غسلها بالماء والصابون أو في غسالة الاطباق. عند ازالة الحلقة الدوارة من ارضية الفرن من اجل التنظيف، تأكد من اعادتها إلى الوضع الصحيح.
- ازل الروائح من الفرن بوضع كأس من الماء مع عصير ومبشور الليمون في وعاء عميق يمكن وضعه في المايكروويف. شغل المايكروويف لمدة ٥ دقائق. امسح جيداً وجفف بخرقه ناعمة.
- عندما يصبح من الضروري تغيير ضوء الفرن، الرجاء الاتصال باقرب مركز للخدمة تابع لبلالك اند ديكور.

## إرشادات هامة

- ١- لا تعبت بالاقفال الداخلية للباب أو تعطلها.
- ٢- لا تدخل اداة وبخاصة اداة معدنية بين الباب والفرن بينما يكون الأخير بوضعية التشغيل.
- ٣- لا تقم بتشغيل المايكروويف عندما يكون فارغاً.
- ٤- ولتقليل خطر الحريق داخل تجويف الفرن:
- أ- عند تسخين الطعام في وعاء بلاستيكي أو ورقي، احرص على مراقبة الفرن نظراً لاحتمال حدوث اشتعال.
- ب- ازل حلقات الربط السلكية عن الاكياس الورقية أو البلاستيكية قبل وضعها في الفرن.
- ج- إذا لاحظت انبعاث دخان، قم باطفاء فرن المايكروويف أو انزع القابس من الكهرباء وابق الباب مقفلاً لخمسة ألسنة اللهب إن وجدت.
- د- لا تستخدم تجويف الفرن لأغراض التخزين. ولا تترك المنتجات الورقية، اواني الطهي أو الطعام داخل تجويف الفرن في حالة عدم الاستخدام.
- ٥- يجب عدم يتم تسخين السوائل أو الاطعمة الأخرى في اوعية محكمة الاغلاق حيث أنها تكون معرضة للانفجار.
- ٦- تسخين المايكروويف للمشروبات يمكن ان ينجم عنه تأخر الغليان الفوار، بالتالي يتعين اتخاذ جانب الحذر لدى التعامل مع الوعاء.
- ٧- لا تقلي الطعام في الفرن. فالزيت الساخن يمكن ان يتلف اجزاء الفرن واوانيه وان ينجم عنه حتى حروقا في البشرة.
- ٨- يجب عدم يتم تسخين البيض بقشره والبيض المسلوق كاملاً في افران المايكروويف لانه قد ينفجر حتى بعد توقف عملية التسخين في المايكروويف
- ٩- اثقب الاطعمة ذات القشرة السمكة مثل البطاطا، ثمر القرع الكامل، التفاح والكستناء قبل طهيها.
- ١٠- يجب تحريك محتويات زجاجات الارضاع ومرطبات اغذية الأطفال وهزها وفحص درجة حرارتها قبل تقديمها من اجل تجنب الحروق.
- ١١- ينبغي فحص اواني الطبخ للتأكد من ملاءمتها للاستخدام في فرن المايكروويف. ( يرجى الرجوع إلى الجدول المقدم في القسم الخاص باواني الطهي المسموح ها) ويمكنك أيضاً إجراء اختبار للتأكد من انها آمنة على الاستخدام في المايكروويف. ضع الاناء

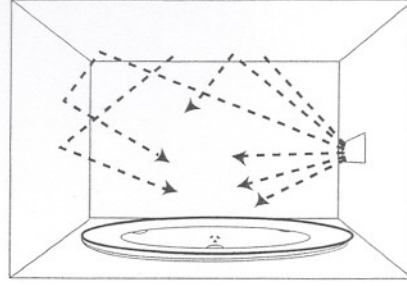

لبداء دورة الطهي :

- ١- ضع الطعام في الفرن وأغلق الباب.
- ٢- اختر مستوى الطاقة الذي تريده.
- ٣- استعمل جهاز التوقيت لتحديد فترة الطهي.

ملاحظة:

حالما يتم تشغيل جهاز التوقيت يبدأ الفرن بالطهي. وعندما تختار فترة أقل من دقيقتين، أدر جهاز التشغيل إلى ما بعد دقيقتين ثم أرجع إلى التوقيت الصحيح.

تحذير:

ارجع دائماً جهاز التوقيت إلى وضعية الصفر في حال إخراج الطعام من الفرن، قبل أن يكتمل وقت الطهي المحدد أو عند عدم استعمال الفرن. ولإطفاء الفرن أثناء عملية الطهي، اضغط على زر فتح الباب وافتحه.

#### كيفية الاعتناء بفرن المايكروويف الاواني التي يسمح باستخدامها داخل فرن المايكروويف:

- استخدم اوان تسمح بمرور الطاقة عبر الاناء وتسخين الطعام. استخدم فقط مقياس حراري يوصى باستخدامه لفرن المايكروويف.
- لا تستخدم أطباقاً معدنية أو أطباقاً بإطار معدني.
- لا تستخدم منتجات ورقية معاد تدويرها لأنها قد تحتوي على أجزاء معدنية صغيرة يمكن ان تسبب الشرر أو الحريق.
- ينصح باستخدام الأطباق الدائرية أو البيضاوية أكثر من استخدام الأطباق المربعة،/ المستطيلة حيث أن الطعام الموجود في الزوايا يمثل إلى أن يطهى أكثر من البقية.
- يمكن استخدام شرائط رفيعة من صفائح الألمنيوم لمنع الإفراط في طهي المناطق المكشوفة. ولكن احرص على عدم استخدام الكثير منها وحافظ على مسافة بوصة واحدة بين الصفيحة وتجويف الفرن.
- اطفئ الفرن وانزع القابس الكهربائي من المقبس قبل التنظيف.

مايكروويف	اواني الطهي
نعم	زجاج مقاوم للحرارة
لا	زجاج غير مقاوم للحرارة
نعم	خزف مقاوم للحرارة ض
نعم	طباق بلاستيكية آمنة
نعم	في المايكروويف
نعم	وراق المطبخ
لا	صينية معدنية
لا	شبكة معدنية
لا	صفائح ألومنيوم وأوعية
	من الصفائح

## كيفية ضبط وظائف التحكم بالفرن


كل مرة يتم فيها لمس أي زر من الأزرار، يصدر صوت إشعارا باللمسة.

### ضبط الساعة

لإدخال توقيت لساعة الفرن مثل الساعة ١٢:١٥ بعد الظهر



TIME

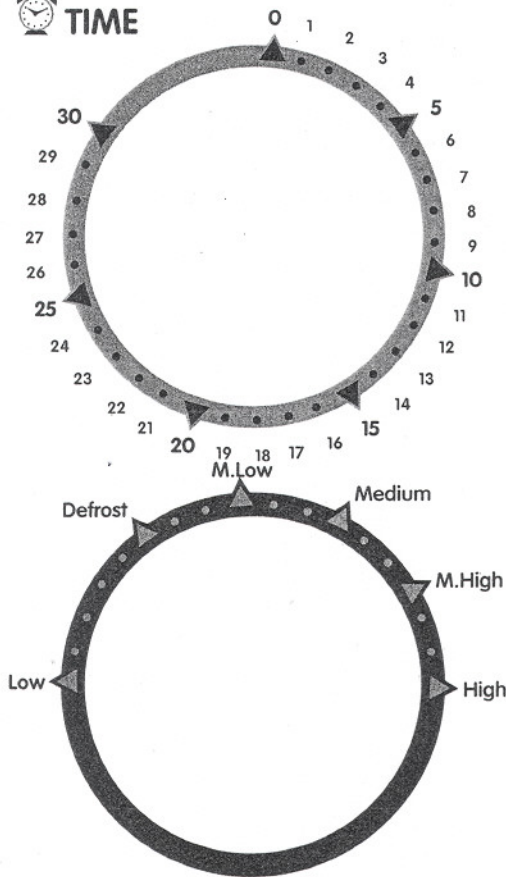

POWER

### قرص المؤقت

يوفر إمكانية تحديد توقيتات مرئية بمجرد لفه سهلة بإبهامك لاختيار فترة الطهي المطلوبة التي يمكن أن تصل إلى ٣٠ دقيقة لكل دورة طهي.

### قرص الطاقة/التشغيل

يستخدم قرص التشغيل لاختيار مستوى الطاقة المطلوبة للطهي. وهي الخطوة الأولى لبدء دورة الطهي.

### الطهي بالمايكروويف


للحصول على طهي خالص بالمايكروويف، هناك ستة وضعيات للطاقة بإمكانك الاختيار من بينها بما يناسب المهمة التي تريد إنجازها. تزداد طاقة تيار المايكروويف بإدارة القرص باتجاه عقارب الساعة. ويمكن تصنيف مستويات الطاقة كما يلي:

الوصف	الخارجة	لقدرة
عال	٪١٠٠	١
متوسط - عال	٪٨٥	٢
متوسط	٪٦٦	٣
متوسط - منخفض	٪٤٨	٤
تذويب الثلج	٪٤٠	٥
منخفض	٪١٧	٦



## التعريف بالأجزاء

- ١ - نظام قفل أمان للباب
- ٢ - نافذة الفرن
- ٣ - فتحة تهوية الفرن
- ٤ - عمود تدوير
- ٥ - حلقة دوارة
- ٦ - صينية من الزجاج

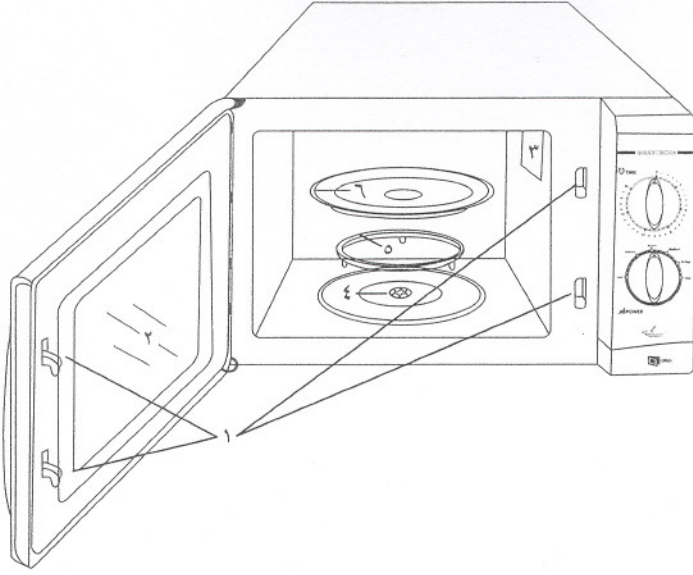

## مزايا فرن المايكروويف سعة ٣٠ لتراً

- لسعة ٢٠ لتر مثالي للعائلة
- قرص الطاقة يحدد الطاقة المطلوبة للطهي
- جهاز توقيت لضبط مدة الطهي
- زر فتح الباب يحرر نظام القفل لفتح الباب
- ٦ مستويات للطاقة ليناسب عدد متنوع من الاحتياجات وحدة التحكم الأمامية

## كيفية تركيب فرن المايكرووي

عليها علامات حروق. وإذا كان هناك أي تلف، فالرجاء عدم تشغيل فرن المايكروويف والاتصال بموظفي الخدمة المؤهلين.

### ملاحظات عملية:

يجب ان يوضع فرن المايكروويف على سطح مستو ومستقر يمكنه ان يتحمل وزن فرن المايكروويف وأثقل الأطعمة التي من الممكن طبخها في الداخل.

- لا تضع فرن المايكروويف في الأماكن التي تتولد فيها الحرارة، النداءة أو الرطوبة العالية أو بالقرب من مواد قابلة للاشتعال.
- للتشغيل الصحيح، يجب أن يتوفر في فرن المايكروويف مجرى هوائي كاف ( ٢٠ سم من فوق، ١٠ سم من الخلف، ٥ سم من الجانبين) لا تقم بتغطية أو سد أي من الفتحات، لا تقم بنزع القوائم.
- تجنب تشغيل فرن المايكروويف بدون الصينية الزجاجية والمسند الدوار ولا تضع أي شيء على سطح الفرن
- لا تشغل فرن المايكروويف دون أن تكون الصينية الزجاجية والمسند الدوار وعمود التدوير في أماكنها الصحيحة
- احرص على تغطية الطعام أثناء الطهي. فالأغطية تمنع الترشش وتجعل الطعام يطهى بشكل متساو.
- قلب الأطعمة مرة واحدة خلال الدورة لتسريع طهي الأطعمة مثل الدجاج والبيزر. اما الأشياء الكبيرة مثل اللحم المشوي فيجب تقلبها مرة واحدة على الأقل.
- أعد ترتيب الأطعمة مثل كرات اللحم في منتصف دورة الطهي من أعلى إلى أسفل ومن وسط الطبق إلى الأطراف الخارجية.

## ضمان شامل لمدة سنتين لأدوات BLACK & DECKER المنزلية

تمنح Black & Decker ضمان شامل مدته سنتين للمنتج اعتباراً من تاريخ الشراء، يسري الضمان علي عيوب التصنيع أو عيوب المواد الداخلة في التصنيع. في حالة إصابة المنتج بأي عطل زثناء فترة الضمان، فإن لشركة حرية الاختيار إما إصلاحه أو استبداله بدون أي تكلفة.

لا يغطي الضمان الأعطال الناتجة عن الحوادث، سوء الاستعمال، الإهمال، الاستعمال الخاطئ، أو عدم اتباع النظم المعمول بها محالياً. كذلك، لا تنطبق شروط الضمان إذا تمك صيانة أو تصليح المنتج لدي طرف غير معتمد من قبل شركة Black & Decker ، أو عند استخدام قطع غيار بدون الرجوع أو أخذ موافقة الشركة وتسببت هذه القطع في العطل إذا توقف إنتاج أي طراز مع عدم وجود البديل المناسب، فإن لشركة Black & Decker الحرية في إصلاح المنتج أو استبداله بطراز آخر ذو نفس القيمة الشرائية.

إتمام عمالية الشراء  
إملاً بطاقة تسجيل الضمان مع التأكد من وجود الختم الأصلي للوكيل المعتمد (وتوضيح تاريخ الشراء) ثم أرفق بإصال الشراء بالبطاقة. الرجاء الاحتفاظ بهما لإبرازهما في حالة المطالبة في المستقبل.

عملية المطالبة  
خذ المنتج المعطل مع بطاقة الضمان وإيصال الشراء بنفسك إلي مركز الصيانة المحلي. أو يمكنك إرساله بالبريد. في حالة الإرسال بالبريد أو الشحن؛ تأكد من تفريغ المنتج من الماء كلياً وقم بتغليفه جيداً في صندوق كرتون مقوي مع إضافة مواد تغليف لملأ الفراغات لتفادي الإصابة بأي ضرر. أفق شرح موجز للمشكلة وتأكد من إعطاء اسمك وعنوان المراسلة

صممت من أجل الاستعمال المحلي فقط.

## BLACK & DECKER HOME APPLIANCE 2 YEAR WARRANTY

Black & Decker provides a 2 Year Warranty for this product from the date of purchase against defects due to defective materials or workmanship. Motor/element burn-outs due to voltage fluctuations are not covered under warranty. If the product should become defective within the warranty period, Black & Decker will repair or (at Black & Decker's discretion) replace it free of charge.

The warranty provisions do not cover failure due to accident, misuse, abuse, negligence or non observation of local regulations on the part of the user. Equally, the warranty provisions do not apply where the appliance has been serviced by a person not authorised by Black & Decker or serviced with non-approved parts and this has contributed to the fault of the product. Superseded models without a replacement equivalent will either be repaired or (at Black & Decker's discretion) replaced with another product of similar retail value.

### UPON PURCHASE

Fill in the Warranty Registration Card with the original Authorised Dealer's stamp (indicating date of purchase) and attach your purchase receipt to it. Retain in case of claims in the future.

### MAKING A CLAIM

Take your defective product together with the Warranty Registration Card & purchase receipt to your local service Centre. You can either do this in person or send it freight prepaid. If mailing or shipping your appliance, ensure and remove all the water and pack it carefully in a sturdy carton with enough packing material to prevent damage. Include a note describing the problem to the service Centre and be sure to give your return address.

### DESIGNED FOR DOMESTIC PURPOSES ONLY.

# Names & Addresses of Black & Decker Houseware Service Concessionaires

**Algeria** - BD Corporation, 36, Bis Rue Tella Ahcen, Cheraga/Alger, Algeria. **Tel.:**+21321-364364 **Fax:**+21321-363508. **Bahrain** - Fawaz Al Zayani, P.O.Box 26563, Adliya, Manama. **Tel.:**+973-715252/712756 **Fax:**+973-713789. **Bangladesh** - Ultra Corporation, 8, Kushol Centre, Uttara, Dhaka-1230. **Tel.:**+8802-8919272/9756 Ext.28 **Fax:**+8802-9887167, **Mobile:**+88-017560891. **Egypt** - Anasia Distribution P.O. Box: 2443, Heliopolis 11361, Cairo. **Tel.:**+202-2684159 **Fax:**+202-2684169. **Eritrea** - Delina International, P.O. Box 5969, Gold Ras Damtew Desta Street, Asmara. **Tel.:**+29111-126683 **Fax:**+29111-121095. **Ethiopia** - Tewfik Sherif & Co. Ltd., P.O. Box 5583, Debre Zeit Road, Addis Ababa. **Tel.:**+2511-651700/651601 **Fax:**+2511-650570/420570. **Gibraltar** - Corner Shop, P.O.Box 77, City Mill Lane, Gibraltar. **Tel.:**+350-78452 **Fax:**+350-70083. **India - Delhi** - Gryphon Impex Pvt. Ltd., D-6/4, Okhla Industrial Area, Phase - I, New Delhi-110020. **Tel.:**+9111-6372602/3/4 **Fax:**+9111-6372601. **Iran - Tehran** - Service Centre of Iran, No 510, Karger Ave, Below Pasteur Sq. Tehran. **Tel.:**+9821-6407672/6490656 **Fax:**+9821-6490729. **Kish Island** - CayhanElectricCo., No.69, Paradise Shopping Centre, Kish Island. **Tel./Fax:**+98-76444-22894. **Jordan** - Bashiti Hardware, P.O. Box 1564, Code 11953, Al Wihdat, Amman. **Tel.:**+9626-5350009/4770741 **Fax:**+9626-5350012/4789783. **Kenya** - Zylog Enterprises, IPS Building, Kaunda Street, P.O.Box 40877, Nairobi. **Tel.:**+2542-338188/199 **Fax:**+2542-330737. **Kuwait** - Al Omar Technical Co., P.O. Box 4062, 13041 Safat, Kuwait. **Tel.:**+965-4848595/4840039 **Fax:**+965-4845652. **Lebanon** - Est. Kettaneh SA, P.O.Box 110242, Dora Highway, Kettaneh Building, Beirut. **Tel.:**+9611-885602 **Fax:**+9611-601579. **Libya** - El Ghouli Brothers, P.O.Box 348, Benghazi. **Tel.:**+21861-9097681/4183 **Fax:**+9094123. **Malta** - John G. Cassar Ltd., 36 Victory Str, Qormi QRM 06, Malta. **Tel.:**+356-493251 **Fax:**+356-483231. **Mauritius** - Happy World Marketing Ltd., Block 2, Industrial Estate, Coromandel, P.O. Box 429, Port Louis. **Tel.:**+230-2337012/2126237 **Fax:**+230-2337330. **Nepal** - Universal Trading Centre, P.O. Box 1947, Tripureswor, Kathmandu. **Tel.:**+9771-262192/260587 **Fax:**+9771-261154. **Nigeria** - Amin Bros. Eng. Co. Ltd., 30A (Plot 1291), Akin Adesola Street, Victoria Island, Lagos. **Tel.:**+2341-3201778 **Fax:**+2341-2613667. **Oman** - Omasco, P.O. Box 2734, Ruwi, Muscat. **Tel./Fax:**+968-564311. **Pakistan - Karachi** - Ammar Service & Spares, 60, Bank Arcade, Serai Road, Karachi. **Tel.:**+9221-2426905 **Fax:**+9221-2427214/ c/o 2425243. **Lahore** - Electronics Inn, 212-G Raja Centre, Main Market, Gulberg, Lahore. **Tel.:**+9242-5756750. **Philippines** - Amity Sales Centre, No. 244 Unit B, Escolta Street, Manila. **Tel.:**+632-27400141. Amon Trading Corporation, 10/F Pacific Star Building, Makati Ave Ext, Manila. **Tel.:**+632-28150811. **Qatar** - Al Muftah Trading & Cont., P.O. Box 875, Doha. **Tel.:**+974-4650880/4446868 **Fax:**+974-4441415. **Saudi Arabia - Dammam** - Al Najim Saudi Intl. Co. Ltd., P.O.Box 1017, Dammam 31431. **Tel.:**+9663-8822299 Ext.168 **Fax:**+9663-8827027. **Jeddah** - Anasia, P.O. Box 50959, Jeddah - 21533. **Tel.:**+9662-6533661 **Fax:**+9662-6533504. **Jubail** - MMG-Mohammad Al-Mojil Group, P.O. Box 450, Jubail 31951, Opp-Gulf Bridge Library & Riyadh House. **Tel.:**+9663-3612850/3624487/3621729 **Fax:**+9663-3623589/0783. **Madina** - Garziz Trad. for Bldg. Mat. & Decoration, P.O. Box 3364, Madina. **Tel.:**+9664-8261490/8227636 **Fax:**+9664-8265741. **Riyadh** - Anasia, P.O. Box 18689, Riyadh-11425. **Tel.:**+9661-2693751 **Fax:**+9661-4501178. **Yanbu** - Mohd Abdullah Mohd Al Amoudi, P.O. Box 813, Yanbu. **Tel./Fax:**+9664-3900946. **Sri Lanka** - Delmege General Equip. Pvt. Ltd., 297, Union Place, Colombo - 2. **Tel.:**+941-334106 **Fax:**+941-334105. **Sudan** - United Distribution Company, Sayed Abdel Rehman Street, P.O. Box 325, Khartoum. **Tel.:**+24911-772612/777296 **Fax:**+24911-770919. **Tanzania** - General Motors Investment, 14 Nyerere Road, P.O. Box 16541, Dar Es Salaam. **Tel.:**+2860930/3205/3467 **Fax:**+2865412/3. **Tunisia** - Techni-Sud, 68, Rue d'Algerie, Sfax. **Tel.:**+2164-226335. **UAE - Abu Dhabi** - Light House Electric., P.O.Box 120, Abu Dhabi. **Tel.:**+9712-6726131 **Fax:**+9712-6720667. **Dubai** - Black & Decker (O) A.G., P.O. Box 5420, Dubai. **Tel.:**+9714-7028234/233 **Fax:**+9714-2822765. Ideal Machinery & Equipmt. R. Workshop, P.O.Box 37116, Al Quoz, Dubai. **Tel.:**+9714-3474160 **Fax:**+9714-3474157. **Sharjah** - Spectrum Ind. Services, P.O. Box 20228, Sharjah. **Tel.:**+9716-5336321 **Fax:**+9716-5336320. Tabook Workshop Eqpt. Trad., P.O. Box 48680, Near Star Cinema Complex, Sharjah. **Tel./Fax:**+9716-5334452. **Yemen** - Metco Ltd., P.O.Box 12363, Sana'a. **Tel.:**+9671-204227/215753 **Fax:**+9671-204204. **Zimbabwe** - J.D.Distributors, P.O. Box 226, 17 Belvedere Road, Graniteside, Harare. **Tel.:**+2634-753913/4/5/6/7 **Fax:**+2634-753918.



## WARRANTY REGISTRATION CARD

YOUR NAME / الاسم \_\_\_\_\_

YOUR ADDRESS / العنوان \_\_\_\_\_

POSTCODE / الرمز البريدي \_\_\_\_\_

DATE OF PURCHASE / تاريخ الشراء \_\_\_\_\_

DEALER'S NAME & ADDRESS / اسم و عنوان البائع \_\_\_\_\_

PRODUCT MODEL NO. MX20P